

LCD TV SERVICE MANUAL

CHASSIS: ML-041A

MODEL: RM-30LZ50C

CAUTION

BEFORE SERVICING THE CHASSIS, READ THE SAFETY PRECAUTIONS IN THIS MANUAL.



CONTENTS

CONTENTS	2
PRODUCT SAFETY	3
SPECIFICATION	6
TIMING CHART	10
ADJUSTMENT INSTRUCTION	15
TROUBLE SHOOTING	16
BLOCK DIAGRAM	21
WIRING DIAGRAM	23
EXPLODED VIEW	24
EXPLODED VIEW PARTS LIST	25
REPLACEMENT PARTS LIST	26
SVC. SHEET	

SAFETY PRECAUTIONS

IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by \triangle in the Schematic Diagram and Replacement Parts List.

It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent X-RADIATION. Shock, Fire, or other Hazards.

Do not modify the original design without permission of manufacturer.

General Guidance

An **isolation Transformer should always be used** during the servicing of a receiver whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks.

It will also protect the receiver and it's components from being damaged by accidental shorts of the circuitry that may be inadvertently introduced during the service operation.

If any fuse (or Fusible Resistor) in this TV receiver is blown, replace it with the specified.

When replacing a high wattage resistor (Oxide Metal Film Resistor, over 1W), keep the resistor 10mm away from PCB.

Keep wires away from high voltage or high temperature parts.

X-RAY Radiation

Warning:

The source of X-RAY RADIATION in this TV receiver is the High Voltage Section and the LCD PANEL.

For continued X-RAY RADIATION protection, the replacement panel must be the same type panel as specified in the Replacement Parts List.

To determine the presence of high voltage, use an accurate high impedance HV meter.

Adjust brightness, color, contrast controls to minimum. Measure the high voltage.

The meter reading should indicate

23.5 $_{\rm i}$ 1.5KV: 14-19 inch, 26 $_{\rm i}$ 1.5KV: 19-21 inch, 29.0 $_{\rm i}$ 1.5KV: 25-29 inch, 30.0 $_{\rm i}$ 1.5KV: 32 inch

If the meter indication is out of tolerance, immediate service and correction is required to prevent the possibility of premature component failure.

Before returning the receiver to the customer,

always perform an **AC leakage current check** on the exposed metallic parts of the cabinet, such as antennas, terminals, etc., to be sure the set is safe to operate without damage of electrical shock.

Leakage Current Cold Check(Antenna Cold Check)

With the instrument AC plug removed from AC source, connect an electrical jumper across the two AC plug prongs. Place the AC switch in the on position, connect one lead of ohm-meter to the AC plug prongs tied together and touch other ohm-meter lead in turn to each exposed metallic parts such as antenna terminals, phone iacks, etc.

If the exposed metallic part has a return path to the chassis, the measured resistance should be between 1M Ω and 5.2M Ω .

When the exposed metal has no return path to the chassis the reading must be infinite.

An other abnormality exists that must be corrected before the receiver is returned to the customer.

Leakage Current Hot Check (See below Figure)

Plug the AC cord directly into the AC outlet.

Do not use a line Isolation Transformer during this check.


Connect 1.5K/10watt resistor in parallel with a 0.15uF capacitor between a known good earth ground (Water Pipe, Conduit, etc.) and the exposed metallic parts.

Measure the AC voltage across the resistor using AC voltmeter with 1000 ohms/volt or more sensitivity.

Reverse plug the AC cord into the AC outlet and repeat AC voltage measurements for each exposed metallic part. Any voltage measured must not exceed 0.75 volt RMS which is corresponds to 0.5mA.

In case any measurement is out of the limits specified, there is possibility of shock hazard and the set must be checked and repaired before it is returned to the customer.

Leakage Current Hot Check circuit

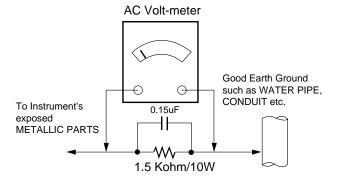

SERVICING PRECAUTIONS

CAUTION: Before servicing receivers covered by this service manual and its supplements and addenda, read and follow the *SAFETY PRECAUTIONS* on page 3 of this publication.

NOTE: If unforeseen circumstances create conflict between the following servicing precautions and any of the safety precautions on page 3 of this publication, always follow the safety precautions. Remember: Safety First.

General Servicing Precautions

- Always unplug the receiver AC power cord from the AC power source before;
 - Removing or reinstalling any component, circuit board module or any other receiver assembly.
 - Disconnecting or reconnecting any receiver electrical plug or other electrical connection.
 - Connecting a test substitute in parallel with an electrolytic capacitor in the receiver.
 - **CAUTION:** A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.
- Test high voltage only by measuring it with an appropriate high voltage meter or other voltage measuring device (DVM, FETVOM, etc) equipped with a suitable high voltage probe.Do not test high voltage by "drawing an arc".
- Do not spray chemicals on or near this receiver or any of its assemblies.
- 4. Unless specified otherwise in this service manual, clean electrical contacts only by applying the following mixture to the contacts with a pipe cleaner, cotton-tipped stick or comparable non-abrasive applicator; 10% (by volume) Acetone and 90% (by volume) isopropyl alcohol (90%-99% strength)

CAUTION: This is a flammable mixture.

Unless specified otherwise in this service manual, lubrication of contacts in not required.

- Do not defeat any plug/socket B+ voltage interlocks with which receivers covered by this service manual might be equipped.
- Do not apply AC power to this instrument and/or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.
- Always connect the test receiver ground lead to the receiver chassis ground before connecting the test receiver positive lead
 - Always remove the test receiver ground lead last.
- Use with this receiver only the test fixtures specified in this service manual.

CAUTION: Do not connect the test fixture ground strap to any heat sink in this receiver.

Electrostatically Sensitive (ES) Devices

Some semiconductor (solid-state) devices can be damaged easily by static electricity. Such components commonly are called *Electrostatically Sensitive (ES) Devices*. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by static by static electricity.

 Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed to prevent potential shock reasons prior to applying power to the unit under test.

- After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
- Use only a grounded-tip soldering iron to solder or unsolder ES devices
- Use only an anti-static type solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
- 5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
- Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
- Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

 Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device.)

General Soldering Guidelines

- Use a grounded-tip, low-wattage soldering iron and appropriate tip size and shape that will maintain tip temperature within the range or 500 ¡ € to 600 ; €.
- Use an appropriate gauge of RMA resin-core solder composed of 60 parts tin/40 parts lead.
- 3. Keep the soldering iron tip clean and well tinned.
- Thoroughly clean the surfaces to be soldered. Use a mall wirebristle (0.5 inch, or 1.25cm) brush with a metal handle.
 Do not use freon-propelled spray-on cleaners.
- 5. Use the following unsoldering technique
 - a. Allow the soldering iron tip to reach normal temperature. (500 $;\mathbb{E}$ to 600 $;\mathbb{E}$)
 - b. Heat the component lead until the solder melts.
 - c. Quickly draw the melted solder with an anti-static, suctiontype solder removal device or with solder braid. CAUTION: Work quickly to avoid overheating the circuitboard printed foil.
- 6. Use the following soldering technique.
 - a. Allow the soldering iron tip to reach a normal temperature $(500\,;\mathbb{E}\ to\ 600\,;\mathbb{E})$
 - b. First, hold the soldering iron tip and solder the strand against the component lead until the solder melts.
 - c. Quickly move the soldering iron tip to the junction of the component lead and the printed circuit foil, and hold it there only until the solder flows onto and around both the component lead and the foil.
 - **CAUTION:** Work quickly to avoid overheating the circuit board printed foil.
 - d. Closely inspect the solder area and remove any excess or splashed solder with a small wire-bristle brush.

IC Remove/Replacement

Some chassis circuit boards have slotted holes (oblong) through which the IC leads are inserted and then bent flat against the circuit foil. When holes are the slotted type, the following technique should be used to remove and replace the IC. When working with boards using the familiar round hole, use the standard technique as outlined in paragraphs 5 and 6 above.

Removal

- Desolder and straighten each IC lead in one operation by gently prying up on the lead with the soldering iron tip as the solder melts
- Draw away the melted solder with an anti-static suction-type solder removal device (or with solder braid) before removing the IC.

Replacement

- 1. Carefully insert the replacement IC in the circuit board.
- Carefully bend each IC lead against the circuit foil pad and solder it.
- Clean the soldered areas with a small wire-bristle brush. (It is not necessary to reapply acrylic coating to the areas).

"Small-Signal" Discrete Transistor Removal/Replacement

- Remove the defective transistor by clipping its leads as close as possible to the component body.
- Bend into a "U" shape the end of each of three leads remaining on the circuit board.
- 3. Bend into a "U" shape the replacement transistor leads.
- 4. Connect the replacement transistor leads to the corresponding leads extending from the circuit board and crimp the "U" with long nose pliers to insure metal to metal contact then solder each connection.

Power Output, Transistor Device Removal/Replacement

- 1. Heat and remove all solder from around the transistor leads.
- 2. Remove the heat sink mounting screw (if so equipped).
- Carefully remove the transistor from the heat sink of the circuit board.
- 4. Insert new transistor in the circuit board.
- 5. Solder each transistor lead, and clip off excess lead.
- 6. Replace heat sink.

Diode Removal/Replacement

- Remove defective diode by clipping its leads as close as possible to diode body.
- Bend the two remaining leads perpendicular y to the circuit board.
- Observing diode polarity, wrap each lead of the new diode around the corresponding lead on the circuit board.
- 4. Securely crimp each connection and solder it.
- Inspect (on the circuit board copper side) the solder joints of the two "original" leads. If they are not shiny, reheat them and if necessary, apply additional solder.

Fuse and Conventional Resistor

Removal/Replacement

- Clip each fuse or resistor lead at top of the circuit board hollow stake
- Securely crimp the leads of replacement component around notch at stake top.
- 3. Solder the connections.

CAUTION: Maintain original spacing between the replaced component and adjacent components and the circuit board to prevent excessive component temperatures.

Circuit Board Foil Repair

Excessive heat applied to the copper foil of any printed circuit board will weaken the adhesive that bonds the foil to the circuit board causing the foil to separate from or "lift-off" the board. The following guidelines and procedures should be followed whenever this condition is encountered.

At IC Connections

To repair a defective copper pattern at IC connections use the following procedure to install a jumper wire on the copper pattern side of the circuit board. (Use this technique only on IC connections).

- 1. Carefully remove the damaged copper pattern with a sharp knife. (Remove only as much copper as absolutely necessary).
- carefully scratch away the solder resist and acrylic coating (if used) from the end of the remaining copper pattern.
- Bend a small "U" in one end of a small gauge jumper wire and carefully crimp it around the IC pin. Solder the IC connection.
- 4. Route the jumper wire along the path of the out-away copper pattern and let it overlap the previously scraped end of the good copper pattern. Solder the overlapped area and clip off any excess jumper wire.

At Other Connections

Use the following technique to repair the defective copper pattern at connections other than IC Pins. This technique involves the installation of a jumper wire on the component side of the circuit board.

- Remove the defective copper pattern with a sharp knife.
 Remove at least 1/4 inch of copper, to ensure that a hazardous condition will not exist if the jumper wire opens.
- Trace along the copper pattern from both sides of the pattern break and locate the nearest component that is directly connected to the affected copper pattern.
- Connect insulated 20-gauge jumper wire from the lead of the nearest component on one side of the pattern break to the lead of the nearest component on the other side.

Carefully crimp and solder the connections.

CAUTION: Be sure the insulated jumper wire is dressed so the it does not touch components or sharp edges.

SPECIFICATION

NOTE: Specifications and others are subject to change without notice for improvement.

1. Application range

This specification is applied to ML-041A chassis.

2. Requirement for Test

Testing for standard of each part must be followed in below condition.

- (1) Temperature: 25°C ± 2°C
- (2) Humidity: 65% ± 10%
- (3) Power: Standard input voltage (AC 100-240V, 50/60Hz)
- (4) Measurement must be performed after heat-run more than 30min.
- (5) Adjusting standard for this chassis is followed a special standard.

3.General Specification(TV)

No.	Item	Specification	Remark
1	Video input applicable system	1)PAL-D/K,B/G,I	
		2)NTSC-M	
		3)SECAM NTSC 4.43'	
2	Receivable broadcasting system	1)PAL/SECAM BG	EU/Non-EU(RZ/RT)
		2)PAL/SECAM DK	(PAL Market)
		3)PAL I/I	
		4)SECAM L/L'	
		5)NTSC M	
		6)PAL-N/M	
		7)NTSC M	7)NTSC Area(RM)
3	RF input channel	VHF : E2 ~ E12	
		UHF : E21 ~ E69	PAL
		CATV : S1 ~ S20	
		HYPER : S21 ~ S41	
		L/L': B,C,D	FRANCE
		VHF: 2 ~ 13	
		UHF : 14 ~ 69	NTSC
		CATV : 1 ~ 125	
		VHF Low: 1~M10	JAPAN
		VHF High : 4~S22	
		UHF : S23~62	
4	Input voltage	AC 100 - 240V/ 50Hz,60HZ	
5	Picture size	750.06 mm	30"
6	Tuning system	FVS 100 program	PAL, 200PR.(Option)
		FS	NTSC
7	Operting environment	1)Temp : 0 ~ 40 deg	
		2)Humidity: 85%	
8	Storage environment	3)Temp : -20 ~ 60 deg	
		4)Humidity: 85%	
9	Display	LCD Module	LPL, AUO, CMO
	1		· · · · · · · · · · · · · · · · · · ·

5.General Specification(Monitor)

No.	Item		Specification	on	Unit	Remark
1	Panel	30" TFT WXGA L	_CD			
2	Frequency range	H:31 ~ 61KHz, V:	56 ~ 75Hz	<u>'</u>		DVI-I input
		1) Contrast/ Brigh	itness			
3	Control function	2) H- Position/ V-	Position			
		3) Tracking : Cloc	k/Phase			
		4) Auto Configure)			
		5) Reset				
		1: Y				
4	Component Jack	3: Pb				
		5: Pr				Middle east
		7: Line1 Ready				/NTSC Only
		9: LINE2				
		11: LINE3				
		13: Line3 Ready				
		2: Y GND				
	D4 Jack	4: Pb GND				
	(525i,525p,750p,1125i)	6: Pr GND				
		8: LINE1				Japan only
		10: Line2 Ready				
		12: SWITCH GNI)			
		14: SWITCH				
		H/V-Sync	Video	Power consumption		LED
5	Power ON	ON/ON	Active	≤ Max 170	W	Red dimmed
	Stand by	OFF/ON	OFF	≤ 3.0	W	Red
	DPMS Mode	ON/OFF	OFF	≤typ.30	W	Red dimmed
	Power off	-	-	-	W	*
		Туре	LPL	697.8 x 431.8 x 50.9		
		Size	AUO	683.6 x 431.8 x 41.6	mm	(H) x (V) x (D)
6	LCD Module		CMO	683.6 x 433.6 x 43.5		
		Pixel Pitch	LPL	0.1675 x 0.5025 x RGB		
			AUO	0.1675 x 0.5025 x RGB	mm	
			CMO	0.16755 x 0.5025 x RGB		
		Pixel Format		z. By 768 vert. pixels		
				arrangement		
		Coating		ing(3H), Anti-glare		
			treatment	of the front polarizer		
		Back Light	LPL	16EEFL		
			AUO	16CCFL		
			CMO	16CCFL		

6.Optical Feature(LCD Module)

No.	Item				Remark			
					LPL	AUO	СМО	
1	Viewing Angle <cr≥10></cr≥10>	R/L, U/D			170,170	170,170	170,170	
2	Luminance	Luminano	ce(cd/ m²)		500	600	500	Typical
		Variation			1.3			MAX/MIN
3	Contrast Ratio				350	600	500	ALL white/All back
4	CIE Color Coordinates	WHITE	W _X	Тур.	0.284	0.285	0.289	LPL
			W _Y	Тур.	0.295	0.293	0.303	
		RED	X _r	Тур.	0.631	-	0.635	
			Y _r	Тур.	0.339	-	0.335	
		Green	X_g	Тур.	0.282	-	0.280	
			Yg	Тур.	0.597	-	0.603	
		Blue	Xb	Тур.	0.144	-	0.147	
			Yb	Тур.	0.076	-	0.076	

7. Feature and Function

No.	Item	Specification	Remark
1	Teletext	TOP, FLOF, LIST 10 page	Top(option)
2	REMOCON	NEC code	PAL/NTSC
3	AV input	1	Rear(RT/RM)
4	S-AV input	1	Side
5	Component input	2	Side, Rear(RT/RM)
6	PERI TV connector	Half SCART: 1	Rear(RZ)
7	PERI TV connector	Full SCART: 1	Rear(RZ)
8	RGB input	1	DVI
9	RS-232	1	D-Sub 9 pin(RM)
10	Discrete IR	1	(RM)
11	D-sub audio input	1	Stereo
12	2 Carrier stereo	BG,DK	
13	NICAM stereo	BG,I,LL'	
14	2 Carrier dual	BG,DK	
15	NICAM dual	BG,I,LL'	
16	DW(Double Window) mode	X	
17	MW(Multi Window) mode	X	
18	Film mode	0	
19	Noise reduction	X	
20	Progressive scan	0	
21	Motion detection	0	
22	SRS WOW	X	
23	Swivel Speaker	X	
24	EZ-pip	X	
25	Local Key	Pr+/-, vol+/-, ok, menu, tv/av, power	


8.Component Video Input(Y, PB, PR)

NO	Resoluton	H-freq(kHz)	V-freqHz)	Pixel clock	Proposed
1	640 x 480	15.73	60.00	SDTV. DVD 480i	RZ, RT, RM
2	640 x 480	15.63	59.94	SDTV. DVD 480i	RZ, RT, RM
3	704 x 480	31.47	59.94	EDTV 480p	RT, RM
4	720 x 576	15.625	50.00	SDTV. DVD 625 Line	RZ, RT, RM
5	720 x 576	31.25	50.00	HDTV 576p	RT, RM
6	1280 x 720	45.00	60.00	HDTV 720p	RT, RM
7	1280 x 720	44.96	59.94	HDTV 720p	RT, RM
8	1920 x 1080	31.25	50.00	HDTV 1080i 50Hz(For Australia)	RT, RM
9	1920 x 1080	33.75	60.00	HDTV 1080i 60Hz(ATSC)	RT, RM
10	1920 x 1080	33.72	59.94	HDTV 1080i 59.94Hz	RT, RM

9.PC Input Mode

NO	Resoluton	H-freq(kHz)	V-freq(Hz)	Pixel clock(MHz)	Proposed						
	DVI-PC, Analog RGB										
1	640 x 480	31.469	59.94	25.17	VESA(VGA)						
2	640 x 480	35	67	30.24	VESA(VGA)						
3	640 x 480	37.500	75.00	31.50	VESA(VGA)						
4	800 x 600	35.156	56.25	36.00	VESA(SVGA)						
5	800 x 600	37.879	60.31	40.00	VESA(SVGA)						
6	800 x 600	48.077	72.18	50.00	VESA(SVGA)						
7	800 x 600	46.875	75.00	49.50	VESA(SVGA)						
8	1024 x 768	48.363	60.00	65.00	VESA(XGA)						
9	1024 x 768	56.476	70.06	75.00	VESA(XGA)						
10	1024 x 768	60.023	75.02	78.75	VESA(XGA)						
11	1280 x 768	47.693	60.00	80.125	VESA(WXGA)						
12	1280 x 768	45.00	60.00	74.335	HDCP DVI Digital 720p						
13	1920 x 1080	33.75	60.00	86.375	HDCP DVI Digital 1080i						

TIMING CHART

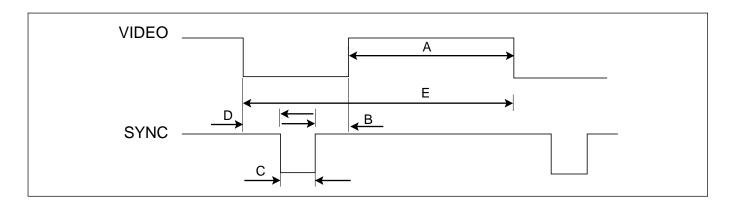

<< Dot Clock (MHz), Horizontal Frequency (kHz), Vertical Frequency (Hz), Horizontal etc... (μs), Vertical etc... (ms) >>

Mode	H/V Sort	Sync Polarity	Dot Clock	Frequency	Total Period (E)	Video Active Time (A)	Front Porch (B)	Sync Duration (D)	Back Porch (F)	Resolution
1	Η	+	25.175	31.469	800	640	16	96	48	640x480
'	V	_	23.173	59.94	525	480	10	2	33	0408460
2	Н	_	30.240	35	864	640	64	64	96	640x480
	V	+	30.240	66.667	525	480	3	3	39	040X400
3	Н	_	24.5	37.5	840	640	16	64	120	640x480
3	V	_	31.5	75	500	480	1	3	16	040X400
4	Н	_	00	35.156	1024	800	24	72	128	000**000
4	V	_	36	56.25	625	600	1	2	22	800x600
-	Н	+	40.0	37.879	1056	800	40	128	88	000**000
5	V	+	40.0	60.317	628	600	1	4	23	800x600
	Н	+	500	48.077	1040	800	56	120	64	000 000
6	V	+	50.0	72.188	666	600	37	6	23	800x600
_	Н	+/-	40.5	46.875	1056	800	16	80	160	
7	V	+/-	49.5	75.0	625	600	1	3	21	800x600
	Н	_	05.0	48.363	1344	1024	24	136	160	4004
8	V	_	65.0	60.004	806	768	3	6	29	1024x768
	Н	+	7-	56.476	1328	1024	24	136	144	4004 700
9	V	+	75	70.069	806	768	3	6	29	1024x768
	Н	+		60.023	1312	1024	16	96	176	4004::700
10	V	_	78.75	75.029	800	768	1	3	28	1024x768
44	Н	+	70.50	47.776	1664	1280	64	128	192	4000 700
11	V	_	79.50	59.870	798	768	3	7	20	1280x768

ADJUSTMENT INSTRUCTION

1. Application Object

This instruction is for the application to the LCD TV.

2. Adjustment

2.1 Auto Gain/Offset adjustment

- 2.1.1 Adjustment preparation
- Conduct Heat Run with the White Pattern for more than 30 minutes.
- Connect the signals of Pattern Generator to DVI-I Jack of LCD TV.

2.1.2 Auto Gain/Offset adjustment

- Use the Pattern Generator (801GF, VG819) to authorize XGA (1024 X 768) for resolution and 16 gray scale signals for patterns. Or authorize 16 gray scale (11 gray scale) signals in accordance with VG819.
- Press the IN-START Key to convert to the adjustment mode using the adjustment (SVC) remote controller, and press VOL+ Key at the AutoGain menu.
- Once the adjustment is completed, press the Enter Key to save and finish the adjustment

2.2 EDID (The Extended Display Identification Data) setting

- 1) Connect D-Sub to DVI-I Cable with DVI-I Jack.
- 2) Set the input mode of the Set to PC.
- Select the OPT3 from the OSD menu and set Analog or Digital for DDC data selection.
- 4) Select Analog for analog data, and Digital for digital data.
- 5) Connect the DDC automation equipment and write the DDC data.

2.2.1 EDID DATA [DDC DATA Analog]

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	1E	6D	39	75	01	01	01	01
10	0C	0E	01	03	18	46	2B	78	EE	E8	AA	A1	57	49	9C	25
20	10	48	4B	AB	8C	00	45	4F	61	4F	81	CF	01	01	01	01
30	01	01	01	01	01	01	40	1F	00	90	51	00	1B	30	40	88
40	37	00	ВС	ΑE	21	00	00	1C	00	00	00	FD	00	32	4B	1F
50	3C	0A	00	0A	20	20	20	20	20	20	00	00	00	FC	00	52
60	5A	33	30	4C	5A	35	30	0A	20	20	20	20	00	00	00	FC
70	00	0A	20	20	20	20	20	20	20	20	20	20	20	20	00	B0

[DDC DATA Digital]

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	1E	6D	ЗА	75	01	01	01	01
10	0C	0E	01	03	98	46	2B	96	EE	E8	AA	A1	57	49	9C	25
20	10	48	4B	BF	EE	00	31	40	3B	CA	45	40	61	40	81	C0
30	81	CF	01	01	01	01	40	1F	00	90	51	00	1B	30	40	88
40	37	00	ВС	ΑE	21	00	00	1C	00	00	00	FD	00	32	4B	1F
50	3C	0A	00	0A	20	20	20	20	20	20	00	00	00	FC	00	52
60	5A	33	30	4C	5A	35	30	0A	20	20	20	20	00	00	00	FC
70	00	0A	20	20	20	20	20	20	20	20	20	20	20	20	00	08

2.3 HDCP (High-Bandwidth Digital Contents Protection) Set

2.3.1 HDCP DVI(Digital Visual Interface) is the link which transmits HD video of HD and STB when in sleep mode.

This function prevents the hazard of hang display thus securing the security against the contents and copy protection.

2.3.2 To store in EEPROM(AT24C16) in HDCP function connect DVI cable.Detailed work content from work map reference.

Note. : HDCP will temporarily exclude in spec. HDCP will apply from USA Product later.

3. Shipping Conditions

NO		ITEM		CONDITION	REMARK
1	Power			Off	
2	Volume Level			30	
3	Main Pcture Inp	out		TV	
5	Main Last Chan	inel		Pr 01	
8	Mute			Off	
9	ARC			16:9	
10	Station	Auto Progra	am		
		Manual Pro	gram		
		Program Ed	dit		
		Favorite Pro	ogram	None	
11	Picture	PSM		Dynamic	
		Dynamic Contrast Brightness		80	
				40	
			Colour	70	
			Sharpness	70	
			Tint	0	NTSC OPTION
14	Sound	SSM		Flat	
		AVL		Off	
		Balance		0	
15	Special	Input		TV	
		Child Lock		Off	
		Auto sleep		Off	
		Language		English(Area Management)	
16	PC H-Positi	H-Position			
		V-Position		Variable by each mode	
		Clock			
		Phase			
		Auto Config	jure		

*Option(PAL)

NO	ITEM	CONDITION	REMARK
		Option 1	l.
1	Side AV	1	0: Side AV Off
			1: Side AV On
2	SCART	1	0: SCART Off
			1: SCART On
3	PC	1	0: PC Off
			1: PC On
4	SideComp	1	0: SideComp Off
			1: SideComp On
5	16:9	1	0: Wide Off
			1: Wide On
6	200PR	0	0: 100 Program
			1: 200 Program
7	Text	1	0: Text Off
			1: Text On
8	ACMS	1	0: ACMS On
			1: ACMS Off
		Option 2	
1	HiDev	0	0: HiDev Off
			1: HiDev On
2	Hotel	0	0: Hotel Off
			1: Hotel On
3	Тор	1	0: Top Off
			1: Top On
4	III SAVE	1	O: Ch. Sound Non Memory
			1: Ch. Sound Memory
5	Turbo Vol	0	0: except below area(Off)
			1: Middle-east Area Vol On
6	Ch/Aus	0	0: except below area(Off)
			1: China, Australia On

NO	ITEM	CONDITION	REMARK
		Option 3	
1	Language	1	0: Eng Only
			1: EU5
			2: 12 nations(Europe)
			3: Eng + Chines
			4: Eng + Arab + Urdu
			5: Eng + FARSI
2	Txt Lang	0	0: WEST EU
			1: EAST EU 1
			2: TURKY EU
			3: EAST EU 2
			4: CYRILLIC 1
			5: CYRILLIC 2
			6: CYRILLIC 3
			7: TURKY GRE 1
			8: TURKY GRE 2
			9: TURKY GRE 3
			10: ARAB FRAN
			11: ARAB ENG
			12: ARAB HEB 1
			13: ARAB HEB 2
			14: FARSI ENG
			15: FARSI FRA
			16: FARI ALL
3	Inch opt	0	reserved

EDID ADJUSTMENT


Windows EDID V1.0 User Manual

Operating System: MS Windows 98, 2000, XP Port Setup: Windows 98 => Don't need setup


Windows 2000, XP => Need to Port Setup.

This program is available to LCD Monitor only.

- 1. Port Setup
 - a) Copy "UserPort.sys" file to "c:\WINNT\system32\drivers" folder
 - b) Run Userport.exe

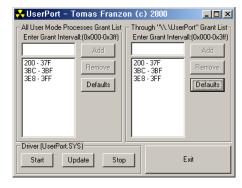


- c) Remove all default number
- d) Add 300-3FF

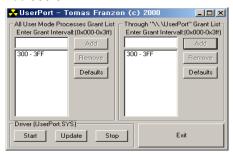


- e) Click Start button.
- f) Click Exit button.

- 2. EDID Read & Write
 - 1) Run WinEDID.exe

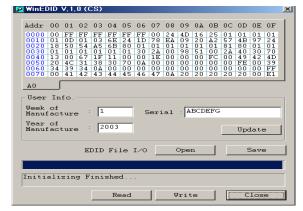

- 2) Edit Week of Manufacture, Year of Manufacture, Serial Number
 - a) Input User Info Data
 - b) Click "Update" button
 - c) Click "Write" button

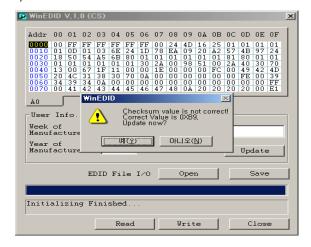


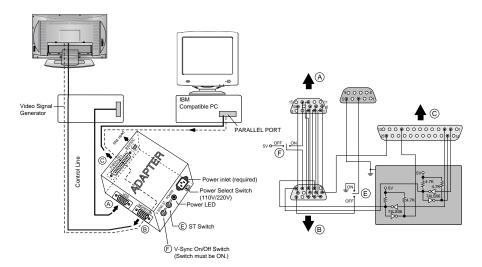



Figure 1. Cable Connection


SVC REMOCON


POWER To turn the TV on or off	NO	KEY	FUNTION	REAMARK
POWER ON POWER key to deactivate): It should be deactivated when delivered.	1	POWER	To turn the TV on or off	
P-CHECK To check TV screen image easily. Shortcut keys	2	POWER ON		
S-CHECK To check TV screen sound easily Shontout keys ARC To select size of the main screen (Normal, Spectacle, Wide or Zoom) TO select size of the main screen (Normal, Spectacle, Wide or Zoom) TO Switch to closed caption broadcasting TXT To toggle on/off the teletext mode TV/AV To select an external input for the TV screen TO TURBO SOUND TO start turbo sound TURBO PICTURE To start turbo picture To enter adjustment mode when manufacturing the TV sets. To adjust the screen voltage (automatic): In-start → mute → Adjust → AV(Enter into W/B adjustment mode) W/B adjustment (automatic): After adjustifith screen → W/B adjustment completed) TO enter into the adjustment mode. To adjust horizontal line and sub-brightness. To release the adjustment mode To release the adjustment mode APC(PSM) To easily adjust the screen according to surrounding brightness TO easily adjust sound according to surrounding brightness TO easily adjust sound according to the program type MULTIMIDIA To check component input To check component input To move channel up/down or to select a function displayed on the screen. YoL: To adjust the volume or accurately control a specific function. EYE To set a function that will automatically adjust screen status to match the surrounding brightness on attural color can be displayed. MENU To set the delivery condition status after manufacturing the TV set. Displays the telext time in the normal mode. Enables to select the sub code in the telext mode	3	MUTE	To activate the mute function.	
ARC To select size of the main screen (Normal, Spectacle, Wide or Zoom) Nortcut keys ARC To select size of the main screen (Normal, Spectacle, Wide or Zoom) Switch to closed caption broadcasting TXT To toggle on/off the teletext mode TXT To toggle on/off the teletext mode TY/AV To select an external input for the TV screen TO TURBO SOUND To start turbo sound TURBO PICTURE To start turbo picture To enter adjustment mode when manufacturing the TV sets. To adjust the screen voltage (automatic): In-start → mute → Adjust → AV(Enter into W/B adjustment mode) W/B adjustment (automatic): After adjusting the screen → W/B adjustment —Exit two times (Adjustment completed) To enter into the adjustment mode. To adjust horizontal line and sub-brightness. ADJ To enter into the adjustment mode. To adjust horizontal line and sub-brightness. To release the adjustment mode To release the adjustment mode APC(PSM) To easily adjust the screen according to surrounding brightness To easily adjust sound according to the program type MULTIMIDIA To check component input Shortcut keys MULTIMIDIA To check the front AV CH; To move channel up/down or to select a function displayed on the screen. To set a specific function or complete setting. ENTER To set a specific function or complete setting. EYE To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. To select the function such as video, voice, function or channel. IN-STOP To set the delivery condition status after manufacturing the TV set. Displays the telext time in the normal mode. Enables to select the sub code in the telext mode	4	P-CHECK	To check TV screen image easily.	Shortcut keys
7 CAPTION Switch to closed caption broadcasting 8 TXT To toggle on/off the teletext mode 9 TV/AV To select an external input for the TV screen 10 TURBO SOUND To start turbo sound 11 TURBO PICTURE To start turbo picture To enter adjustment mode when manufacturing the TV sets.	5	S-CHECK	To check TV screen sound easily	Shortcut keys
TXT To toggle on/off the teletext mode TV/AV To select an external input for the TV screen TO start turbo sound TURBO SOUND To start turbo picture To enter adjustment mode when manufacturing the TV sets. To adjust the screen voltage (automatic):	6	ARC	, , , , ,	
TV/AV To select an external input for the TV screen TURBO SOUND To start turbo sound TURBO PICTURE To enter adjustment mode when manufacturing the TV sets. To adjust the screen voltage (automatic): In-start → mute → Adjust → AV(Enter into W/B adjustment mode) W/B adjustment (automatic): After adjusting the screen → W/B adjustment → Exit two times (Adjustment completed) ADJ To enter into the adjustment mode. To adjust horizontal line and sub-brightness. ADJ To release the adjustment mode (Mono, Stereo or Foreign language) To release the adjustment mode in the screen according to surrounding brightness AC(SSM) To easily adjust sound according to the program type ASC(SSM) To check component input Shortcut keys To move channel up/down or to select a function displayed on the screen. To set a specific function or complete setting. To set a specific function or complete setting. EYE To set a specific function or complete setting. To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. MENU To set the delivery condition status after manufacturing the TV set. Displays the telext time in the normal mode. Enables to select the sub code in the telext mode	7	CAPTION	Switch to closed caption broadcasting	
TURBO SOUND To start turbo sound TURBO PICTURE To enter adjustment mode when manufacturing the TV sets. To adjust the screen voltage (automatic): In-start →mute → Adjust → AV(Enter into W/B adjustment mode) W/B adjustment (automatic): After adjusting the screen →W/B adjustment ←Exit two times (Adjustment completed) ADJ To enter into the adjustment mode. To adjust horizontal line and sub-brightness. ADJ To enter into the adjustment mode (Mono, Stereo or Foreign language) EXIT To release the adjustment mode APC(PSM) To easily adjust the screen according to surrounding brightness ASC(SSM) To easily adjust the screen according to the program type MULTIMIDIA To check component input Shortcut keys CH₁ To move channel up/down or to select a function displayed on the screen. To set a specific function or complete setting. EYE To set a specific function or complete setting. To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. MENU To select the functions such as video, voice, function or channel. In set the delivery condition status after manufacturing the TV set. MODE Used as Mode in the teletext mode	8	TXT	To toggle on/off the teletext mode	
TURBO PICTURE To enter adjustment mode when manufacturing the TV sets. To adjust the screen voltage (automatic):	9	TV/AV	To select an external input for the TV screen	
To enter adjustment mode when manufacturing the TV sets. To adjust the screen voltage (automatic):	10	TURBO SOUND	To start turbo sound	
To adjust the screen voltage (automatic):	11	TURBO PICTURE	RBO PICTURE To start turbo picture	
In-start →mute → Adjust → AV(Enter into W/B adjustment mode) W/B adjustment (automatic): After adjusting the screen →W/B adjustment →Exit two times (Adjustment completed) 13 ADJ To enter into the adjustment mode. To adjust horizontal line and sub-brightness. 14 MPX To select the multiple sound mode (Mono, Stereo or Foreign language) 15 EXIT To release the adjustment mode 16 APC(PSM) To easily adjust the screen according to surrounding brightness 17 ASC(SSM) To easily adjust sound according to the program type 18 MULTIMIDIA To check component input Shortcut keys 19 FRONT-AV To check the front AV Shortcut keys 20 CH; To move channel up/down or to select a function displayed on the screen. 21 VOL; To adjust the volume or accurately control a specific function. 22 ENTER To set a specific function or complete setting. 23 EYE To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. 24 MENU To select the functions such as video, voice, function or channel. 25 IN-STOP To set the delivery condition status after manufacturing the TV set. 26 TIME Displays the telext time in the normal mode. Enables to select the sub code in the telext mode 27 MODE Used as Mode in the teletext mode			To enter adjustment mode when manufacturing the TV sets.	Use the AV
In-start → mute → Adjust → AV(Enter into W/B adjustment mode) W/B adjustment (automatic): After adjusting the screen → W/B adjustment → Exit two times (Adjustment completed) To enter into the adjustment mode. To adjust horizontal line and sub-brightness. ADJ To enter into the adjustment mode. To adjust horizontal line and sub-brightness. ADJ To select the multiple sound mode (Mono, Stereo or Foreign language) EXIT To release the adjustment mode APC(PSM) To easily adjust the screen according to surrounding brightness TO easily adjust sound according to the program type MULTIMIDIA To check component input FRONT-AV To check the front AV CH; To move channel up/down or to select a function displayed on the screen. TO adjust the volume or accurately control a specific function. ENTER To set a specific function or complete setting. EYE To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. MENU To select the functions such as video, voice, function or channel. IN-STOP To set the delivery condition status after manufacturing the TV set. Displays the telext time in the normal mode. Enables to select the sub code in the telext mode Used as Mode in the teletext mode			To adjust the screen voltage (automatic):	
W/B adjustment (automatic): After adjusting the screen →W/B adjustment →Exit two times (Adjustment completed) To enter into the adjustment mode. To adjust horizontal line and sub-brightness. To select the multiple sound mode (Mono, Stereo or Foreign language) EXIT To release the adjustment mode APC(PSM) To easily adjust the screen according to surrounding brightness ASC(SSM) To easily adjust sound according to the program type MULTIMIDIA To check component input To check the front AV CH₁ To move channel up/down or to select a function displayed on the screen. VOL₁ To adjust the volume or accurately control a specific function. ENTER To set a specific function or complete setting. To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. MENU To select the functions such as video, voice, function or channel. IN-STOP To set the delivery condition status after manufacturing the TV set. Displays the telext time in the normal mode. Enables to select the sub code in the teletxt mode Used as Mode in the teletext mode	12	IN-START	In-start \rightarrow mute \rightarrow Adjust \rightarrow AV(Enter into W/B adjustment mode)	
ADJ To enter into the adjustment mode. To adjust horizontal line and sub-brightness. 14 MPX To select the multiple sound mode (Mono, Stereo or Foreign language) 15 EXIT To release the adjustment mode 16 APC(PSM) To easily adjust the screen according to surrounding brightness 17 ASC(SSM) To easily adjust sound according to the program type 18 MULTIMIDIA To check component input Shortcut keys 19 FRONT-AV To check the front AV 20 CH; To move channel up/down or to select a function displayed on the screen. 21 VOL; To adjust the volume or accurately control a specific function. 22 ENTER To set a specific function or complete setting. 23 EYE To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. 24 MENU To select the functions such as video, voice, function or channel. 25 IN-STOP To set the delivery condition status after manufacturing the TV set. Displays the telext time in the normal mode. Enables to select the sub code in the teletx mode			W/B adjustment (automatic):	1
14 MPX To select the multiple sound mode (Mono, Stereo or Foreign language) 15 EXIT To release the adjustment mode 16 APC(PSM) To easily adjust the screen according to surrounding brightness 17 ASC(SSM) To easily adjust sound according to the program type 18 MULTIMIDIA To check component input Shortcut keys 19 FRONT-AV To check the front AV Shortcut keys 20 CH; To move channel up/down or to select a function displayed on the screen. 21 VOL; To adjust the volume or accurately control a specific function. 22 ENTER To set a specific function or complete setting. 23 EYE To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. 24 MENU To select the functions such as video, voice, function or channel. 25 IN-STOP To set the delivery condition status after manufacturing the TV set. 26 TIME Displays the telext time in the normal mode. Enables to select the sub code in the telext mode			After adjusting the screen →W/B adjustment →Exit two times (Adjustment completed)	mode.
15 EXIT To release the adjustment mode 16 APC(PSM) To easily adjust the screen according to surrounding brightness 17 ASC(SSM) To easily adjust sound according to the program type 18 MULTIMIDIA To check component input Shortcut keys 19 FRONT-AV To check the front AV Shortcut keys 20 CH; To move channel up/down or to select a function displayed on the screen. 21 VOL; To adjust the volume or accurately control a specific function. 22 ENTER To set a specific function or complete setting. 23 EYE To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. 24 MENU To select the functions such as video, voice, function or channel. 25 IN-STOP To set the delivery condition status after manufacturing the TV set. 26 TIME Displays the telext time in the normal mode. Enables to select the sub code in the telext mode	13	ADJ	To enter into the adjustment mode. To adjust horizontal line and sub-brightness.	
16 APC(PSM) To easily adjust the screen according to surrounding brightness 17 ASC(SSM) To easily adjust sound according to the program type 18 MULTIMIDIA To check component input Shortcut keys 19 FRONT-AV To check the front AV Shortcut keys 20 CH; To move channel up/down or to select a function displayed on the screen. 21 VOL; To adjust the volume or accurately control a specific function. 22 ENTER To set a specific function or complete setting. 23 EYE To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. 24 MENU To select the functions such as video, voice, function or channel. 25 IN-STOP To set the delivery condition status after manufacturing the TV set. 26 TIME Displays the telext time in the normal mode. 27 MODE Used as Mode in the teletext mode	14	MPX	To select the multiple sound mode (Mono, Stereo or Foreign language)	
17 ASC(SSM) To easily adjust sound according to the program type 18 MULTIMIDIA To check component input To check the front AV Shortcut keys 20 CH; To move channel up/down or to select a function displayed on the screen. 21 VOL; To adjust the volume or accurately control a specific function. 22 ENTER To set a specific function or complete setting. 23 EYE To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. 24 MENU To select the functions such as video, voice, function or channel. 25 IN-STOP To set the delivery condition status after manufacturing the TV set. Displays the telext time in the normal mode. Enables to select the sub code in the telext mode 27 MODE Used as Mode in the teletext mode	15	EXIT	To release the adjustment mode	
18 MULTIMIDIA To check component input 19 FRONT-AV To check the front AV 20 CH; To move channel up/down or to select a function displayed on the screen. 21 VOL; To adjust the volume or accurately control a specific function. 22 ENTER To set a specific function or complete setting. 23 EYE To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. 24 MENU To select the functions such as video, voice, function or channel. 25 IN-STOP To set the delivery condition status after manufacturing the TV set. 26 TIME Displays the telext time in the normal mode. Enables to select the sub code in the telext mode 27 MODE Used as Mode in the teletext mode	16	APC(PSM)	To easily adjust the screen according to surrounding brightness	
19 FRONT-AV To check the front AV 20 CH; To move channel up/down or to select a function displayed on the screen. 21 VOL; To adjust the volume or accurately control a specific function. 22 ENTER To set a specific function or complete setting. 23 EYE To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. 24 MENU To select the functions such as video, voice, function or channel. 25 IN-STOP To set the delivery condition status after manufacturing the TV set. 26 TIME Displays the telext time in the normal mode. Enables to select the sub code in the telext mode 27 MODE Used as Mode in the teletext mode	17	ASC(SSM)	To easily adjust sound according to the program type	
20 CH; To move channel up/down or to select a function displayed on the screen. 21 VOL; To adjust the volume or accurately control a specific function. 22 ENTER To set a specific function or complete setting. 23 EYE To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. 24 MENU To select the functions such as video, voice, function or channel. 25 IN-STOP To set the delivery condition status after manufacturing the TV set. 26 TIME Displays the telext time in the normal mode. Enables to select the sub code in the telext mode 27 MODE Used as Mode in the teletext mode	18	MULTIMIDIA	To check component input	Shortcut keys
21 VOL; To adjust the volume or accurately control a specific function. 22 ENTER To set a specific function or complete setting. 23 EYE To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. 24 MENU To select the functions such as video, voice, function or channel. 25 IN-STOP To set the delivery condition status after manufacturing the TV set. 26 TIME Displays the telext time in the normal mode. Enables to select the sub code in the telext mode 27 MODE Used as Mode in the teletext mode	19	FRONT-AV	To check the front AV	Shortcut keys
22 ENTER To set a specific function or complete setting. To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. MENU To select the functions such as video, voice, function or channel. IN-STOP To set the delivery condition status after manufacturing the TV set. Displays the telext time in the normal mode. Enables to select the sub code in the telext mode Used as Mode in the teletext mode	20	CH;	To move channel up/down or to select a function displayed on the screen.	
23 EYE To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. 24 MENU To select the functions such as video, voice, function or channel. 25 IN-STOP To set the delivery condition status after manufacturing the TV set. 26 TIME Displays the telext time in the normal mode. Enables to select the sub code in the telext mode 27 MODE Used as Mode in the teletext mode	21	VOL;	To adjust the volume or accurately control a specific function.	
the surrounding brightness so natural color can be displayed. 24 MENU To select the functions such as video, voice, function or channel. 25 IN-STOP To set the delivery condition status after manufacturing the TV set. 26 TIME Displays the telext time in the normal mode. Enables to select the sub code in the telext mode 27 MODE Used as Mode in the teletext mode	22	ENTER	To set a specific function or complete setting.	
24 MENU To select the functions such as video, voice, function or channel. 25 IN-STOP To set the delivery condition status after manufacturing the TV set. 26 TIME Displays the telext time in the normal mode. Enables to select the sub code in the telext mode 27 MODE Used as Mode in the teletext mode	23	EYE	To set a function that will automatically adjust screen status to match	
25 IN-STOP To set the delivery condition status after manufacturing the TV set.			the surrounding brightness so natural color can be displayed.	
26 TIME Displays the telext time in the normal mode. Enables to select the sub code in the telext mode 27 MODE Used as Mode in the teletext mode	24	MENU	To select the functions such as video, voice, function or channel.	
Enables to select the sub code in the telext mode 27 MODE Used as Mode in the teletext mode	25	IN-STOP	To set the delivery condition status after manufacturing the TV set.	
27 MODE Used as Mode in the teletext mode	-		Displays the telext time in the normal mode.	
ZI MODE			Enables to select the sub code in the telext mode	
	27	MODE	Used as Mode in the teletext mode	
			To manually select the channel.	

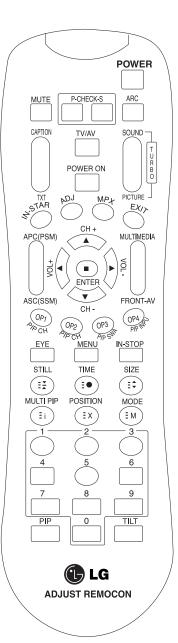



TROUBLESHOOTING

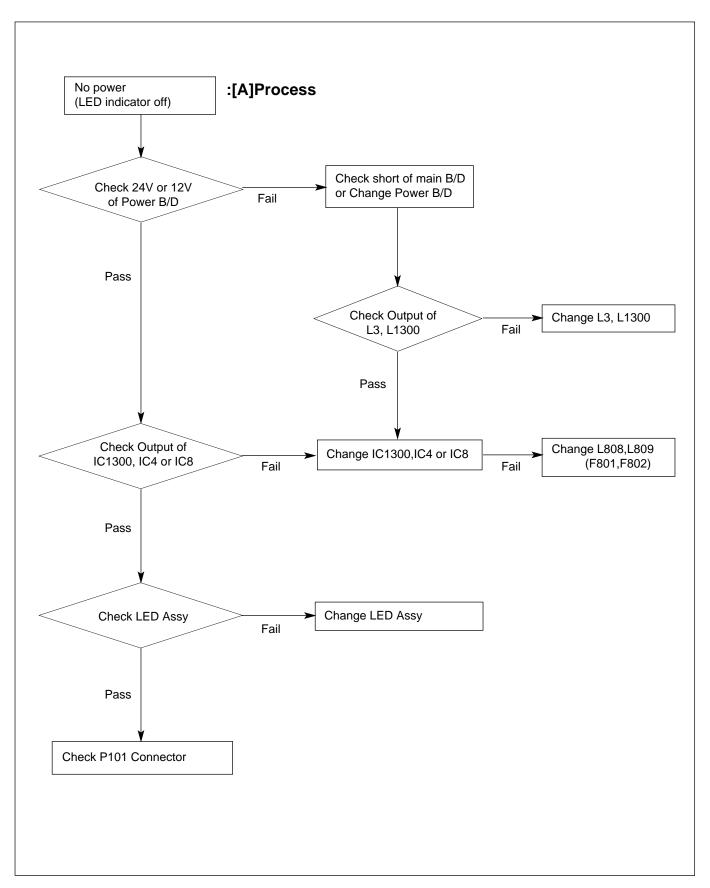

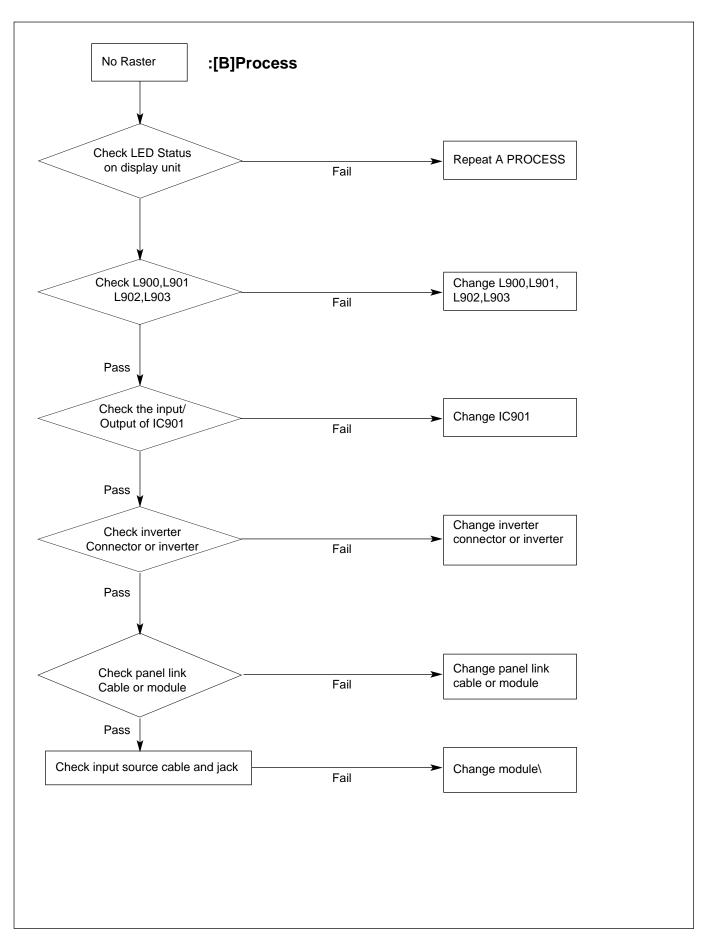


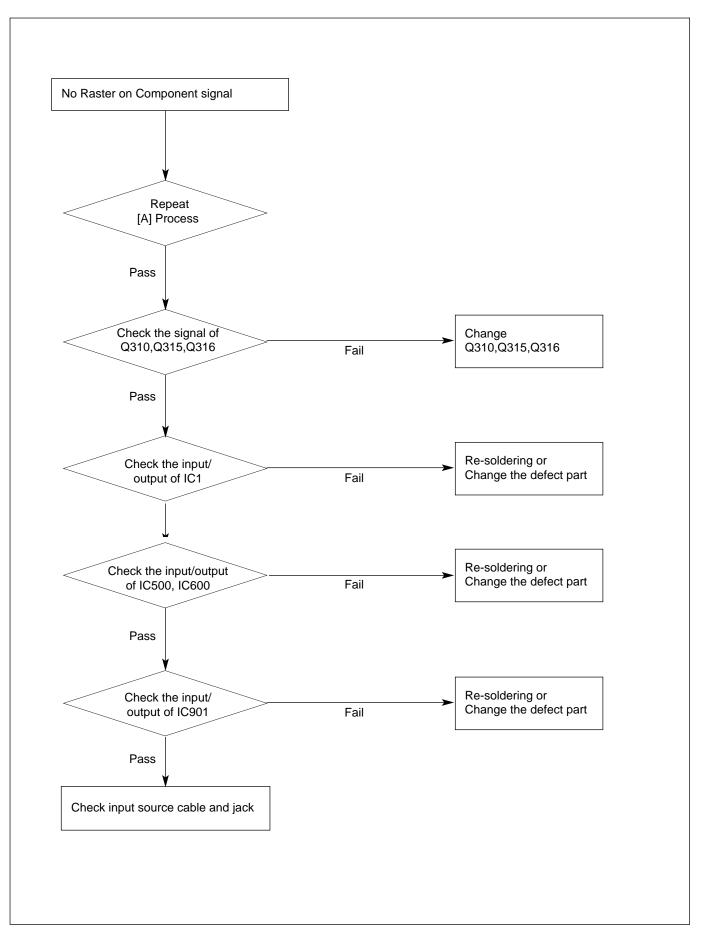

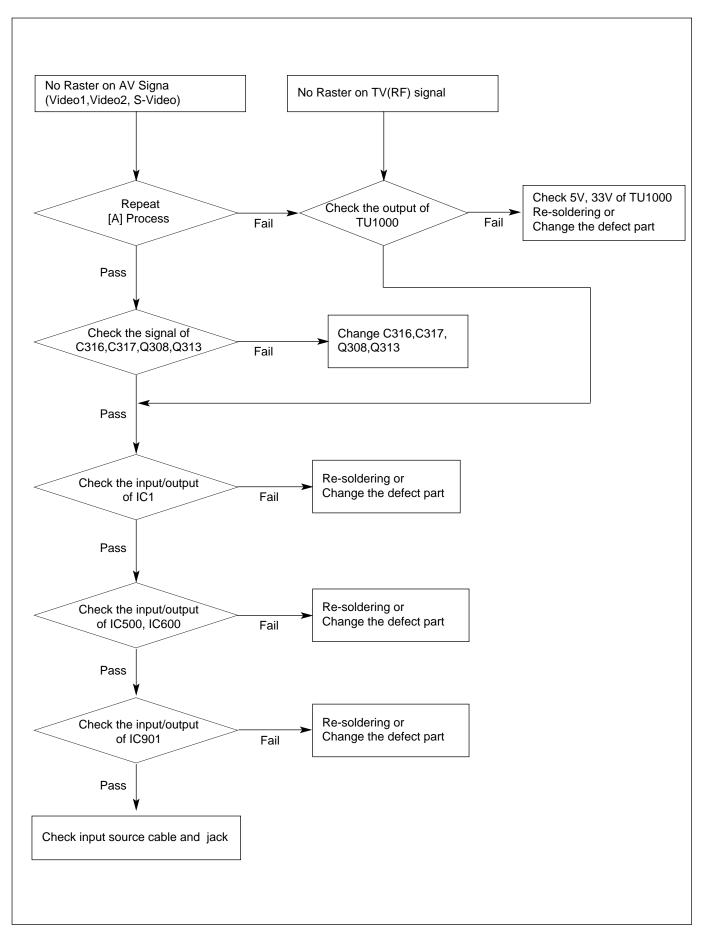

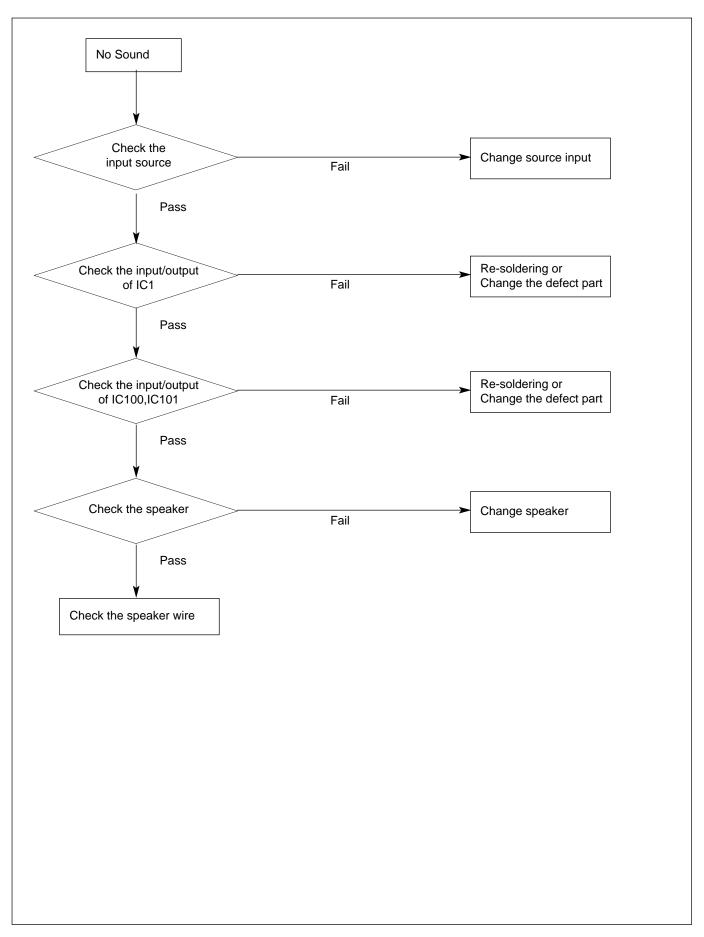

BLOCK DIAGRAM

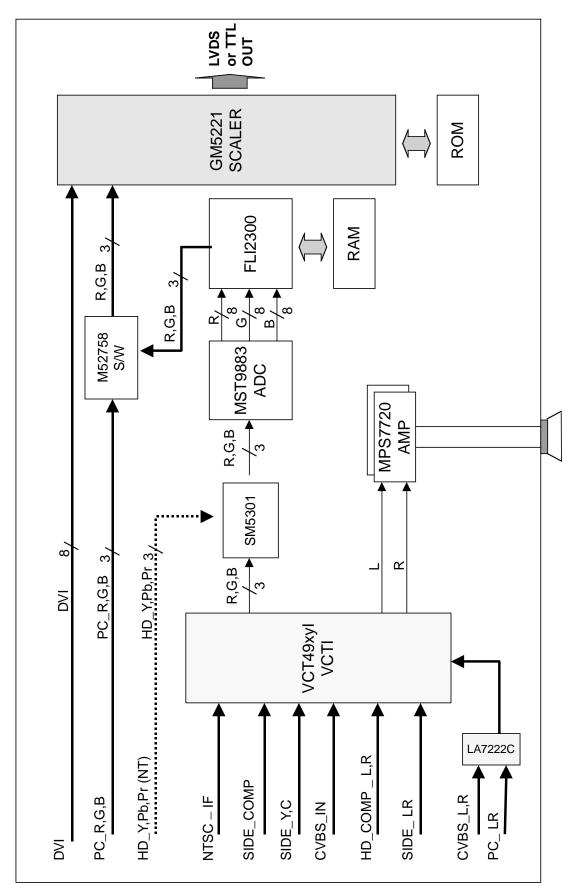

BLOCK DIAGRAM DESCRIPTION

1. Video controller unit and display data conversion unit

The video controller unit receives the video signal inputted to the tuner, AV port (AV1, AV2, S-Video and component) and converts it to the analog RGB signal through the microcomputer (VCTI) combined with the video decoder that integrates various functions in one chip.

Then, it is inputted to the AD converter (AD9883) and generates the 4:4:4 format digital signal. This digital signal is inputted to the picture enhancer (FLI2300), which processes the video signal and converts the image quality enhanced data to an analog RGB signal again before displaying it.

The image quality enhanced de-interlace signal is inputted to the scaler (GM5221) and converted to the LVDS signal by the integrated LVDS IC before being sent to the LCD module.

VCTI is the main microcomputer that processes both video signals and sound signals. It also processes the RF signal received from the tuner.

The scaler enables to adjust timing on the LCD panel, as well as an adjustment of the size and position of the input signal.

The graphic controller unit receives the PC (analog RGB) input and the DVI-D (digital signal), and sends the PC input to the scaler analog port and DVI-D input to the digital port.


The scaler receives two inputs and converts them to the LVDS signal before sending to the module.

2. Power unit

The power unit supplies 33V, 24V and 12V DC power to the main board. 33V DC power is used for the tuner, whereas 24V DC power is directly used by the inverter and the sound amplifier IC. 24V DC power is also used to generate 5V through the regulator. 12V DC power is used for the LCD panel.

5V DC is converted to 3.3V and 1.8V through the regulator, which supplies the necessary power to various ICs, such as VCTI, scaler, FLI2300 and AD9883.

Wiring Part List 1 6631T11020C 6631T25019K 6631T20033C 6631T20033A 6631T20033E 9 6631T20033D 6631T20032E 6631T20032F 6631T20033F Part No. ė. က 4 ∞ 2 9 00000 8 14Pin CN5 CN4 P202 **MAIN BOARD** P1100 P106 2 12Pin 4 12Pin MP101 (5)10Pin P750 € ig (E) P812 POWER BOARD (6) 5Pin 12Pin (3) CN2 CN1 JP1602 - P1601 3Pin@

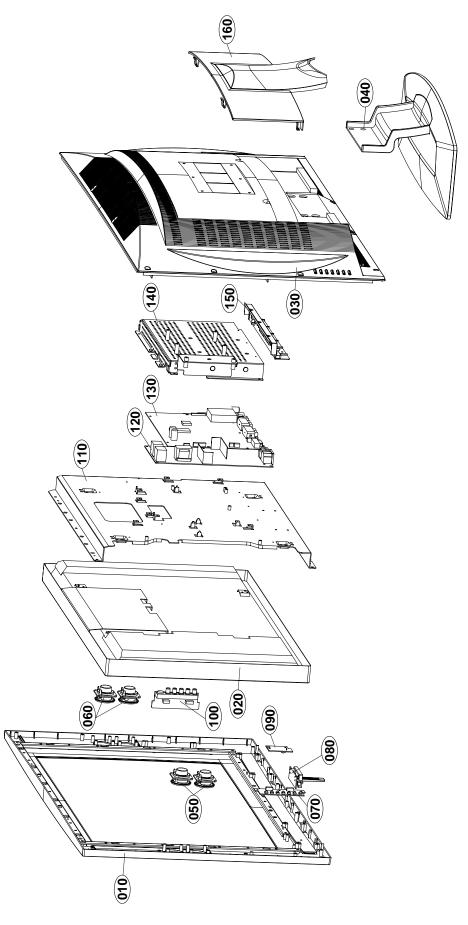

EXPLODED VIEW PARTS LIST

No.	PART NO.	DESCRIPTION		
	3091TKE014R	CABINET ASSEMBLY, RM-30LZ50C BRAND 3090TKE007 USA		
010	3091TKE014U	CABINET ASSEMBLY, RM-30LZ50C BRAND 3090TKE007 RESIN(V0),C/SKD		
	3091TKE014X	CABINET ASSEMBLY, RM-30LZ50C BRAND 3090TKE007 LPL,RESIN(V0)		
020 —	6304FAU015A	LCD(LIQUID CRYSTAL DISPLAY), T296XW01 AU TFT COLOR XGA LVDS 600NITS 16MS MVA		
	6304FLP122A	LCD(LIQUID CRYSTAL DISPLAY), LC300W02-A5 LG PHILPS TFT COLOR EEFL,WXGA,450NITS,LVDS		
030	3809TKE014F	BACK COVER ASSEMBLY, RM-30LZ50 3808TKE006 NON		
030	3809TKE014M	BACK COVER ASSEMBLY, RM-30LZ50 3808TKE006A C/SKD		
040	3043TKK172C	TILT SWIVEL ASSEMBLY, RM-30LZ50 NON NON		
040	3043TKK172D	TILT SWIVEL ASSEMBLY, RM-30LZ50 NON C/SKD		
050	6401TZZ042C	SPEAKER ASSEMBLY, RZ-30LZ50 5WX2EA,8OHM,ESTEC(L),5P,UL1185#24,		
060	6401TZZ042D	SPEAKER ASSEMBLY, RZ-30LZ50 5WX2EA,8OHM,ESTEC(R),4P,UL1185#24		
070	6871TST589A	PWB(PCB) ASSEMBLY,SUB, 26LZ50 KEY SUB TOTAL BRAND KEY BOARD		
080	6871TST765A	PWB(PCB) ASSEMBLY,SUB, 30LZ50 LED & P/SW TOTAL BRAND.		
000	6871TST762A	PWB(PCB) ASSEMBLY,SUB, 26/27LZ50 LED & P/SW TOTAL BRAND.		
090	6871TST588A	PWB(PCB) ASSEMBLY,SUB, 30LZ50 IR SUB TOTAL BRAND IR BOARD		
100 -	6871TVT370B	PWB(PCB) ASSEMBLY,VIDEO, RM-32/26/23LZ50 SIDE A/V SUB TOTAL BRAND .		
100	6871TVT370A	PWB(PCB) ASSEMBLY,VIDEO, RZ-30LZ50 SIDE A/V SUB TOTAL BRAND .		
	4951TKS157C	METAL ASSEMBLY, FRAME RZ-30LZ50 AUO		
110	4951TKS157F	METAL ASSEMBLY, FRAME AUO C/SKD		
	4951TKS157H	METAL ASSEMBLY, FRAME LPL(C/SKD)		
120	6871TPT275A	PWB(PCB) ASSEMBLY,POWER, RZ-30LZ50 POWER TOTAL BRAND ML-041A, 23",26",27",30",32" AUTOBAN		
400	3313TN3003A	MAIN TOTAL ASSEMBLY, RM-30LZ50 AUO BRAND ML-041A		
130	3313TN3002A	MAIN TOTAL ASSEMBLY, RM-30LZ50 LPL BRAND ML-041A		
140	4951TKK169H	METAL ASSEMBLY, REAR RZ-30LZ50		
140	4951TKK169K	METAL ASSEMBLY, REAR RZ-30LZ50 C/SKD		
450	3551TKK516C	COVER ASSEMBLY, RM/RT-30LZ50 REAR NON NON		
150	3551TKK516D	COVER ASSEMBLY, RM/RT-30LZ50 REAR NON C/SKD		
160	3550TKK519A	COVER, RZ-30LZ50 REAR AV		
160	3550TKK519B	COVER, RZ-30LZ50 REAR C/SKD		

REPLACEMENT PARTS LIST

For Capacitor & Resistors, the charactors at 2nd and 3rd digit in the P/No. means as follows;

CC, CX, CK, CN, CH : Ceramic CQ : Polyestor CE : Electrolytic CF : Fixed Film

RD : Carbon Film RS : Metal Oxide Film

RN : Metal Glazed (Chip)
RH : CHIP, Metal Glazed (Chip)
RR : Drawing

				DATE: 2004. 8. 31.
*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
	N	IAIN BOA	RD	
	С	APACITO	DR .	
		C108	0CE476EK638	47UF KMG 50V M FM5 TP 5
		C1100	0CE106BF618	10UF KME 16V M FL TP5
		C1102 C1112	0CE107CK638 0CE108EF618	"100UF SHL,SD 50V M FM5 TP 5" 1000UF KMG 16V M FL TP 5
		C1112	0CE108EF618	1000UF KMG 16V M FL TP 5
		C1114	0CE108EF618	1000UF KMG 16V M FL TP 5
		C1115	0CE108EF618	1000UF KMG 16V M FL TP 5
		C119	0CE106BF618	10UF KME 16V M FL TP5
		C120	0CE106BF618	10UF KME 16V M FL TP5
		C404	0CE227EJ638	220UF KMG 35V M FM5 TP 5
		C1015	0CH6680K416	68PF 50V J NP0 2012 R/TP
		C1016	0CH6680K416	68PF 50V J NP0 2012 R/TP
		C13	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C1303	0CH6101K416	100PF 50V J NP0 2012 R/TP
		C1308	0CH6101K416	100PF 50V J NP0 2012 R/TP
		C14	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C2	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C20	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C237	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C238	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C319	0CH6120K416	12PF 50V J NP0 2012 R/TP
		C321	0CH6120K416	12PF 50V J NP0 2012 R/TP 12PF 50V J NP0 2012 R/TP
		C324 C326	0CH6120K416 0CH6120K416	12PF 50V J NP0 2012 R/TP
		C327	0CH6120K416	12PF 50V J NP0 2012 R/TP
		C328	0CH6120K416	12PF 50V J NP0 2012 R/TP
		C329	0CH6120K416	12PF 50V J NP0 2012 R/TP
		C331	0CH6150K416	15PF 50V J NP0 2012 R/TP
		C333	0CH6150K416	15PF 50V J NP0 2012 R/TP
		C336	0CH6150K416	15PF 50V J NP0 2012 R/TP
		C338	0CH6150K416	15PF 50V J NP0 2012 R/TP
		C339	0CH6150K416	15PF 50V J NP0 2012 R/TP
		C340	0CH6150K416	15PF 50V J NP0 2012 R/TP
		C341	0CH6150K416	15PF 50V J NP0 2012 R/TP
		C43	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C46	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C50	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C515	0CH6330K416	33PF 50V J NP0 2012 R/TP
		C516	0CH6330K416	33PF 50V J NP0 2012 R/TP
		C53	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C59 C701	0CH6102K406 0CH6120K416	1000PF 50V J SL 2012 R/TP 12PF 50V J NP0 2012 R/TP
		C701	0CH6120K416	12PF 50V J NP0 2012 R/TP
		C702	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C755	0CH6471K416	470F 50V J NP0 2012 R/TP
		C756	0CH6471K416	470F 50V J NP0 2012 R/TP
		C757	0CH6471K416	470F 50V J NP0 2012 R/TP
		C758	0CH6101K416	100PF 50V J NP0 2012 R/TP
		C83	0CH6102K406	1000PF 50V J SL 2012 R/TP
ĺ		C86	0CH6102K406	1000PF 50V J SL 2012 R/TP
ĺ		C924	0CH6080K116	8PF 50V D NP0 2012 R/TP
		C925	0CH6080K116	8PF 50V D NP0 2012 R/TP
1	İ	I	l	1

				DATE: 2004. 8. 31.
*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		C129	181-007F	"MPE ECQ-V1H224JL3(TR), 50V 0."
		C130	181-007F	"MPE ECQ-V1H224JL3(TR), 50V 0."
		C1001	0CH3103K516	10000PF 50V 10% B(Y5P) 2012 R
		C1002	0CH3103K516	10000PF 50V 10% B(Y5P) 2012 R
		C1003	0CH3103K516	10000PF 50V 10% B(Y5P) 2012 R
		C1004	0CH3103K516	10000PF 50V 10% B(Y5P) 2012 R
		C1007	0CH3103K516	10000PF 50V 10% B(Y5P) 2012 R
		C1010	0CK273DK51A	27000PF 2012 50V 10% B(Y5P) R
		C107	0CK225DFK4A	"2.2UF 2012 16V 20%,-20% F(Y5V"
		C109	0CH3103K516	10000PF 50V 10% B(Y5P) 2012 R
		C11	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C110	0CH3103K516	10000PF 50V 10% B(Y5P) 2012 R
		C113	0CK225DFK4A	"2.2UF 2012 16V 20%,-20% F(Y5V"
		C114	0CK225DFK4A	"2.2UF 2012 16V 20%,-20% F(Y5V"
		C12	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C127	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C128	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C1300	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C1302	0CH3103K516	10000PF 50V 10% B(Y5P) 2012 R
		C1305	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C1307	0CH3103K516	10000PF 50V 10% B(Y5P) 2012 R
		C135	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C136	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C15	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C16	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C18	0CK106EF56A	10UF 3216 16V 10% X7R R/TP
		C19	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C23	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C3	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C306	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C318	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C4	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C42	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C44	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C45	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C49	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C500	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C505	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C506	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C507	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C508	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C509	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C51	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C510	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C511	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C512	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C513	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C514	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C517	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C518	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C519	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C521	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C522	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C523	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP

				DATE: 2004. 8. 31.
*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		C526	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C527	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C528	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C529	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C530 C531	0CH3104K566 0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP 0.1UF 50V 10% X7R 2012 R/TP
		C532	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C533	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C534	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C535	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C536	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C537	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C538	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C539	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C540	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C541	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C542 C544	0CH3104K566 0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP 0.1UF 50V 10% X7R 2012 R/TP
		C544 C545	0CH3104K566	0.1UF 50V 10% X/R 2012 R/TP 0.1UF 50V 10% X/R 2012 R/TP
		C546	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C547	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C549	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C550	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C551	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C552	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C553	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C554	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C555	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C556 C557	0CH3104K566 0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP 0.1UF 50V 10% X7R 2012 R/TP
		C558	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C559	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C567	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C6	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C60	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C606	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C608	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C609	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C61	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C614 C615	0CH3104K566 0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP 0.1UF 50V 10% X7R 2012 R/TP
		C616	0CH3104K566	0.1UF 50V 10% X/R 2012 R/TP
		C618	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C619	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C620	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C621	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C622	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C623	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C624	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C625	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP 0.1UF 50V 10% X7R 2012 R/TP
		C627 C628	0CH3104K566 0CH3822K516	0.10F 50V 10% X/R 2012 R/TP 8200PF 2012 50V 10% B(Y5P) R/
		C629	0CH3823K516	82000FF 2012 50V 10% B(15F) R/ 82000FF 2012 50V 10% B(Y5P) R
		C632	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C633	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C634	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C635	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C636	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C637	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C638	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C639	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP 0.1UF 50V 10% X7R 2012 R/TP
		C64	0CH3104K566	0.10F 30V 10% A/R 2012 R/1P

				DATE: 2004 9 24
*S	*AL	LOC. NO.	PART NO.	DATE: 2004. 8. 31. DESCRIPTION / SPECIFICATION
	AL	LOC. NO.	TARTINO.	DESCRIPTION OF ECH TOATION
		C640	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C65	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C66	0CK106EF56A	10UF 3216 16V 10% X7R R/TP
		C67	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C700	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C704	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C705	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C75	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C751 C76	0CH3104K566 0CK106EF56A	0.1UF 50V 10% X7R 2012 R/TP 10UF 3216 16V 10% X7R R/TP
		C760	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C761	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C77	0CK106EF56A	10UF 3216 16V 10% X7R R/TP
		C79	0CK106EF56A	10UF 3216 16V 10% X7R R/TP
		C80	0CK106EF56A	10UF 3216 16V 10% X7R R/TP
		C804	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C808	0CK105DK94A	"1UF 2012 50V 80%,-20% R/TP F("
		C809	0CK105DK94A	"1UF 2012 50V 80%,-20% R/TP F("
		C81	0CK106EF56A	10UF 3216 16V 10% X7R R/TP
		C810	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C811	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C812 C813	0CH3104K566 0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP 0.1UF 50V 10% X7R 2012 R/TP
		C82	0CH3104K566	0.1UF 50V 10% X/R 2012 R/TP 0.1UF 50V 10% X/R 2012 R/TP
		C84	0CK106EF56A	10UF 3216 16V 10% X7R R/TP
		C850	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C851	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C852	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C853	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C854	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C855	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C856	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C864	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C865	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP 0.1UF 50V 10% X7R 2012 R/TP
		C866 C867	0CH3104K566 0CH3104K566	0.1UF 50V 10% X/R 2012 R/TP
		C868	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C869	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C870	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C908	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C909	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C910	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C911	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C912	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C913	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP 0.1UF 50V 10% X7R 2012 R/TP
		C914 C915	0CH3104K566 0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP 0.1UF 50V 10% X7R 2012 R/TP
		C915	0CH3104K566	0.1UF 50V 10% X/R 2012 R/TP 0.1UF 50V 10% X/R 2012 R/TP
		C917	0CH3104K566	0.1UF 50V 10% X/R 2012 R/TP
		C918	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C919	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C920	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C921	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C922	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C923	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C926	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C927	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C928 C929	0CH3104K566 0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP 0.1UF 50V 10% X7R 2012 R/TP
		C929	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP 0.1UF 50V 10% X7R 2012 R/TP
		C930	0CH3104K566	0.1UF 50V 10% X/R 2012 R/TP
		C935	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
1	1		1	

				DATE: 2004. 8. 31.
*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		0000		0 4445 -044 4004 X7D 0044 D FD
		C936 C938	0CH3104K566 0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP 0.1UF 50V 10% X7R 2012 R/TP
		C939	0CH3104K566	0.1UF 50V 10% X/R 2012 R/TP
		C940	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C941	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C942	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C943	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C944	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C945	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C946	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C947	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP 0.1UF 50V 10% X7R 2012 R/TP
		C948 C949	0CH3104K566 0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP 0.1UF 50V 10% X7R 2012 R/TP
		C950	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C951	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C952	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C958	0CK225DFK4A	"2.2UF 2012 16V 20%,-20% F(Y5V"
		C96	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C960	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C963	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C969	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C970	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		C973 C10	0CH3104K566 0CK104CK56A	0.1UF 50V 10% X7R 2012 R/TP 0.1UF 1608 50V 10% R/TP X7R
		C10 C115	0CK104CK56A	0.1UF 1608 50V 10% R/TP X/R 0.1UF 1608 50V 10% R/TP X/R
		C116	0CK562CK51A	5600PF 1608 50V 10% R/TP B(Y5
		C117	0CK562CK51A	5600PF 1608 50V 10% R/TP B(Y5
		C118	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C125	0CK105EK56A	1UF 3216 50V 10% X7R R/TP
		C126	0CK105EK56A	1UF 3216 50V 10% X7R R/TP
		C1301	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y5
		C1306	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y5
		C25 C26	0CK104CK56A 0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R 0.1UF 1608 50V 10% R/TP X7R
		C27	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C28	0CK334CF94A	"0.33UF 1608 16V 80%,-20% F(Y5"
		C29	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C30	0CK334CF94A	"0.33UF 1608 16V 80%,-20% F(Y5"
		C31	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C32	0CK334CF94A	"0.33UF 1608 16V 80%,-20% F(Y5"
		C33	0CK334CF94A	"0.33UF 1608 16V 80%,-20% F(Y5"
		C34	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C35 C36	0CK334CF94A 0CK104CK56A	"0.33UF 1608 16V 80%,-20% F(Y5" 0.1UF 1608 50V 10% R/TP X7R
		C36	0CK104CK36A	"0.33UF 1608 16V 80%,-20% F(Y5"
		C38	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C39	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C40	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C41	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C5001	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C504	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C524	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C611	0CK473CK56A	47000PF 1608 50V 10% R/TP X7R
		C612 C613	0CK473CK56A 0CK473CK56A	47000PF 1608 50V 10% R/TP X7R 47000PF 1608 50V 10% R/TP X7R
		C626	0CK473CK56A	0.1UF 1608 50V 10% R/TP X/R
		C020	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C70	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C71	0CK106EF56A	10UF 3216 16V 10% X7R R/TP
		C72	0CK106EF56A	10UF 3216 16V 10% X7R R/TP
		C73	0CK106EF56A	10UF 3216 16V 10% X7R R/TP
		C750	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R

				DATE COOK C C
*S	*A1	LOC NO	P∆PT N∩	DATE: 2004. 8. 31.
3	AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		C752	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C753	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C759	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C78	0CK106EF56A	10UF 3216 16V 10% X7R R/TP
		C8	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C800	0CK105CF94A	"1UF 1608 16V 80%,-20% R/TP F("
		C801	0CK105CF94A	"1UF 1608 16V 80%,-20% R/TP F("
		C802	0CK105CF94A	"1UF 1608 16V 80%,-20% R/TP F("
		C803	0CK105CF94A	"1UF 1608 16V 80%,-20% R/TP F("
		C9	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C901	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y5
		C902	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y5
		C903	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y5
		C904	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y5
		C905	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y5
		C906	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y5
		C907	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y5
		C352	0CC270DK41A	27PF 2012 50V 5% NP0 R/TP
		C121	0CC100CK41A	10PF 1608 50V 5% R/TP NP0
		C122	0CC100CK41A	10PF 1608 50V 5% R/TP NP0
		C21	0CC102CK41A	1000PF 1608 50V 5% R/TP NP0
		C22	0CC102CK41A	1000PF 1608 50V 5% R/TP NP0
		C24	0CC102CK41A	1000PF 1608 50V 5% R/TP NP0
		C343	0CC270CK41A	27PF 1608 50V 5% R/TP NP0
		C345	0CC270CK41A	27PF 1608 50V 5% R/TP NP0
		C348	0CC270CK41A	27PF 1608 50V 5% R/TP NP0
		C350	0CC270CK41A	27PF 1608 50V 5% R/TP NP0
		C351	0CC270CK41A	27PF 1608 50V 5% R/TP NP0
		C353	0CC270CK41A	27PF 1608 50V 5% R/TP NP0
		C47	0CC220CK41A	22PF 1608 50V 5% R/TP NP0
		C48	0CC220CK41A	22PF 1608 50V 5% R/TP NP0
		C501	0CC101CK41A	100PF 1608 50V 5% R/TP NP0
		C600	0CC220CK41A	22PF 1608 50V 5% R/TP NP0
		C601	0CC220CK41A	22PF 1608 50V 5% R/TP NP0
		C602	0CC220CK41A	22PF 1608 50V 5% R/TP NP0
		C603	0CC220CK41A	22PF 1608 50V 5% R/TP NP0
		C610	0CC102CK41A	1000PF 1608 50V 5% R/TP NP0
		C754	0CC471CK41A 0CC102CK41A	470PF 1608 50V 5% R/TP NP0
		C85 C111	0CE475EK638	1000PF 1608 50V 5% R/TP NP0 4.7UF KMG 50V 20% FM5 TP 5
		C111	0CE475EK638	4.70F KMG 50V 20% FM5 TP 5 4.7UF KMG 50V 20% FM5 TP 5
		C112 C1202	0CE475EK638 0CE477EJ618	470UF KMG 35V 20% FM3 TP 5
		C1202	0CE477EJ618 0CE477EJ618	4700F KMG 35V 20% FL TP 5 470UF KMG 35V 20% FL TP 5
		C123	0CE477EJ618 0CE477EJ618	4700F KMG 35V 20% FL TP 5
		C124	0CE477EJ618 0CE477EJ618	4700F KMG 35V 20% FL TP 5
		C1299	0CE477EJ618	470UF KMG 35V 20% FL TP 5
		C131	0CE477EJ618	470UF KMG 35V 20% FL TP 5
		C132	0CE477EJ618	470UF KMG 35V 20% FL TP 5
		C133	0CE477EJ618	470UF KMG 35V 20% FL TP 5
		C134	0CE477EJ618	470UF KMG 35V 20% FL TP 5
		C100	0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C1006	0CH8106J691	10UF 35V 20% 105STD (CYL) R/T
		C1008	0CE227WF6DC	220UF MVK 16V 20% R/TP(SMD) S
		C17	0CH8106J691	10UF 35V 20% 105STD (CYL) R/T
		C201	0CH8106F691	10UF 16V 20% 105STD (CYL) R/T
		C212	0CH8106F691	10UF 16V 20% 105STD (CYL) R/T
		C213	0CH8106F691	10UF 16V 20% 105STD (CYL) R/T
		C216	0CH8106F691	10UF 16V 20% 105STD (CYL) R/T
		C225	0CH8106J691	10UF 35V 20% 105STD (CYL) R/T
		C226	0CH8106J691	10UF 35V 20% 105STD (CYL) R/T
		C227	0CH8106J691	10UF 35V 20% 105STD (CYL) R/T
		C228	0CH8106J691	10UF 35V 20% 105STD (CYL) R/T

				DATE: 2004. 8. 31.
*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		0004	001104001004	40UE 25V 200/ 4050TD (0)// \ D.F.
		C231 C232	0CH8106J691 0CH8106J691	10UF 35V 20% 105STD (CYL) R/T 10UF 35V 20% 105STD (CYL) R/T
		C300	0CH81063691	100F 35V 20% 103STD (CTL) R/1 100UF MVK 16V 20% R/TP(SMD) S
		C301	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD) S
		C302	0CH8106F691	10UF 16V 20% 105STD (CYL) R/T
		C303	0CH8106F691	10UF 16V 20% 105STD (CYL) R/T
		C304	0CH8106F691	10UF 16V 20% 105STD (CYL) R/T
		C307	0CH8106F691	10UF 16V 20% 105STD (CYL) R/T
		C308	0CH8476H691	47UF 25V 20% 105STD (CYL) R/T
		C309	0CH8106F691	10UF 16V 20% 105STD (CYL) R/T
		C312	0CH8106F691	10UF 16V 20% 105STD (CYL) R/T
		C313	0CH8476H691	47UF 25V 20% 105STD (CYL) R/T
		C314	0CH8106F691	10UF 16V 20% 105STD (CYL) R/T
		C315	0CH8106F691	10UF 16V 20% 105STD (CYL) R/T
		C316 C317	0CH8106F691 0CH8106F691	10UF 16V 20% 105STD (CYL) R/T 10UF 16V 20% 105STD (CYL) R/T
		C517	0CE475WJ6DC	4.7UF MVK 35V 20% R/TP(SMD) S
		C502	0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C503	0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C52	0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C520	0CH8106F691	10UF 16V 20% 105STD (CYL) R/T
		C525	0CH8106F691	10UF 16V 20% 105STD (CYL) R/T
		C54	0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C543	0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C55	0CH8476H691	47UF 25V 20% 105STD (CYL) R/T
		C560	0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C566	0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C604 C605	0CH8476F691 0CH8476F691	47UF 16V 20% 105STD (CYL) R/T 47UF 16V 20% 105STD (CYL) R/T
		C605	0CH8476F691	470F 16V 20% 105STD (CYL) R/T
		C62	0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C63	0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C703	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD) S
		C805	0CE227WF6DC	220UF MVK 16V 20% R/TP(SMD) S
		C806	0CE227WF6DC	220UF MVK 16V 20% R/TP(SMD) S
		C807	0CE227WF6DC	220UF MVK 16V 20% R/TP(SMD) S
		C814	0CE227WF6DC	220UF MVK 16V 20% R/TP(SMD) S
		C815	0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C857	0CE227WF6DC	220UF MVK 16V 20% R/TP(SMD) S
		C858 C859	0CH8476F691 0CH8476F691	47UF 16V 20% 105STD (CYL) R/T 47UF 16V 20% 105STD (CYL) R/T
		C859	0CH8476F691 0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C861	0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C862	0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C863	0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C87	0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C88	0CH8476H691	47UF 25V 20% 105STD (CYL) R/T
		C900	0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C953	0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C956	0CH8476H691	47UF 25V 20% 105STD (CYL) R/T
		C957	0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C959	0CH8476F691	47UF 16V 20% 105STD (CYL) R/T
		C97 C972	0CH8476H691 0CH8476H691	47UF 25V 20% 105STD (CYL) R/T 47UF 25V 20% 105STD (CYL) R/T
L		0912	UCH04/0H091	47 OT 23 V 20 70 TO33 TD (CTL) R/T
	D	IODEs		
		D100	0DRFC00288A	SS14 FAIR CHILD R/TP SMA 20-1
		D100	0DRFC00288A	SS14 FAIR CHILD R/TP SMA 20-1
		IC751	0DRSE00018A	SRV05-4.TC SEMTECH R/TP SOT23
		IC754	0DRSE00018A	SRV05-4.TC SEMTECH R/TP SOT23
		ZD1300	0DR340009AA	MBRS340 TP FAIRCHILD NON 40V

				DATE: 2004. 8. 31.
3	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		ZD1301	0DR340009AA	MBRS340 TP FAIRCHILD NON 40V
		D107	0DS226009AA	KDS226 TP KEC SOT-23 80V 300
		D711	0DD184009AA	KDS184 TP KEC - 85V 300
		D102	0DS181009AA	KDS181 TP KEC SOT-23 80V 30
		D103	0DS181009AA	KDS181 TP KEC SOT-23 80V 30
		D104	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 200
		D105	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 200
		D703	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		D704	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD201	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD202	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD215	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD216	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD217	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD218	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD219	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD220	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD222	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		D700	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		D701	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		D702 D705	0DZ510009EE 0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2 UDZ S 5.1B TP ROHM-K SOD323 2
		D705 D706	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD203	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD203 ZD204	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD204 ZD205	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD206	0DZ510003EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD207	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD208	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD210	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD213	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD214	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD221	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD5001	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD5002	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD5003	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD851	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD852	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323 2
		ZD1000	0DZ330009DF	MTZJ33B TP ROHM-K DO34 0.5W 3
		ZD10	0DZ910009FE	UDZS 9.1B TP ROHM 9.1V -
	IC	;		
		IC3	0IKE702700D	"KIA7027AF 3, SOT-89 TP RESET"
		IC200	0ISA722200A	LA7222 (1280 AUDIO)
		IC501	0IMMREB010A	"M12L64322A-6T ESMT 86P,TSOP T"
		IC749	0IMMRSG036A	"M24C02-WMN6T SGS-THOMSON 8P,S
		IC753	0IMMRSG036A	"M24C02-WMN6T SGS-THOMSON 8P,S
		IC907	0IMCRAL006A	AT24C16AN-10SI-2.7 ATMEL 8P S
		IC918	0IMCRAL006A	AT24C16AN-10SI-2.7 ATMEL 8P S
		IC100	0IMCRMZ002A	MP7720 MONOLITHIC POWER SYSTE
		IC101	0IMCRMZ002A	MP7720 MONOLITHIC POWER SYSTE
		IC1300	0IMCRMZ001A	MP1583DN MONOLITHIC POWER SYS
		IC1301	0IMCRMZ001A	MP1583DN MONOLITHIC POWER SYS
		IC500	0IMCRGN002C	FLI2300BD GENESIS 208P PQFP T
		IC750	0IMCRSG010A	ST3232CDR SGS-THOMSON SOP16 R
		IC850	OIMCRMI006A	"M52758FP MITSUBISHI 36PIN, R/"
		IC2000	0IMO140662A	"MC14066BDR2 14P,SOIC TP BILAT"
		IC702 IC1	0IMO140662A 0IPRPMN003C	"MC14066BDR2 14P,SOIC TP BILAT" VCT49XYF C7(NTSC+PAL) MICRONA
		IC600	0IPRPMN003C 0IPRPM3002B	"MST9883C-110 MSTAR 80P,LQFP T"
		IC800	0IPRPNP001A	"SM5301BS(ATSC DTV) NPC 28P,HS"
			1 5.1 1 1 1 1 0 1 A	

				DATE: 2004. 8. 31.
*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		IC901	0IPRPGN014A	GM5221H(HDCP) GENESIS 208P QF
		IC2	0IPMGK2001B	AIC1117A-33CYTR(BS33) AIC SOT
		IC300 IC4	0IPMGKE039A 0IPMGK2001B	"KIA78D09F KEC 3P,DPAK R/TP 9V" AIC1117A-33CYTR(BS33) AIC SOT
		IC505	0IPMGSG018D	"LD1086DT18TR SGS-THOMSON 3P,D"
		IC6	0IPMGSG018D	"LD1086DT18TR SGS-THOMSON 3P,D"
		IC601	0IPMGK2001B	AIC1117A-33CYTR(BS33) AIC SOT
		IC604	0IPMGFA061A	"FAN1587AD33X FAIRCHILD 3P,DPA"
		IC8	0IMCRFA015A	KA7805R FAIRCHILD 2P D-PAK R/
		IC905	0IPMGFA061A	"FAN1587AD33X FAIRCHILD 3P,DPA"
		IC906	0IPMGSG018D	"LD1086DT18TR SGS-THOMSON 3P,D"
		IC103 IC752	OISS780800J OIMCRTI001A	"KA78M08R 3P,D-PAK TP VOL. REG" SN74HCT157D TEXAS INSTRUMENT
		10732	OIMORTIOUTA	SINT-FIGURE TEXAS INSTRUMENT
	c	OIL & CC	ORE & INDUCTO	DR
		L104	6140TBZ045A	"38.5UH(DIP), 6A, P7.5, DR8.3X"
		L104 L105	6140TBZ045A 6140TBZ045A	"38.5UH(DIP), 6A, P7.5, DR8.3X" "38.5UH(DIP), 6A, P7.5, DR8.3X"
		L1300	6140VR0008B	SLF12575T-150M3R2 15UH SMD C
		L1301	6140VR0008B	SLF12575T-150M3R2 15UH SMD C
		L100	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L1002	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L3	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L301	6210TCE001A	HB-1S2012-080JT CERATEC 2012M
		L302 L304	6210TCE001A 6210TCE001G	HB-1S2012-080JT CERATEC 2012M HH-1M3216-501 CERATEC 3216MM
		L304	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L4	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L401	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L500	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L501	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L502	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L503	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L504 L505	6210TCE001G 6210TCE001G	HH-1M3216-501 CERATEC 3216MM HH-1M3216-501 CERATEC 3216MM
		L600	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L601	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L602	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L701	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L800	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L850	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L900	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L901 L902	6210TCE001G 6210TCE001G	HH-1M3216-501 CERATEC 3216MM HH-1M3216-501 CERATEC 3216MM
		L902	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L907	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L202	6210TCE001A	HB-1S2012-080JT CERATEC 2012M
		L203	6210TCE001A	HB-1S2012-080JT CERATEC 2012M
		L207	6210TCE001A	HB-1S2012-080JT CERATEC 2012M
		L208	6210TCE001A	HB-1S2012-080JT CERATEC 2012M
		L211 L212	6210TCE001A 6210TCE001A	HB-1S2012-080JT CERATEC 2012M HB-1S2012-080JT CERATEC 2012M
		L603	6210TCE001A	HB-1S2012-080JT CERATEC 2012M HB-1S2012-080JT CERATEC 2012M
		L003	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-1
		L1001	0LC1020101A	1UH 10% 2012 R/TC FI-B2012-10
		L11	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-1
		L13	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-1
		L14	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-1
		L15	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-1
		L17	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-1
		L2 L402	0LC1032101A 0LC1532101A	10UH 10% 3216 R/TC FI-C3216-1 15UH 10% 3216 R/TC FI-C3216-1
		L402	0LC 1332 10 1A	13011 10% 3210 K/16 FI-63210-1

*0	* ^ 1	100 NO	DARTNO	DATE: 2004. 8. 31.
*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		L403	0LC1532101A	15UH 10% 3216 R/TC FI-C3216-1
		L7	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-1
		L10	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-1
		L12	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-1
		L16	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-1
		L306	0LC1532101A	15UH 10% 3216 R/TC FI-C3216-1
		L307	0LC1532101A	15UH 10% 3216 R/TC FI-C3216-1
		L308	0LC1532101A	15UH 10% 3216 R/TC FI-C3216-1
		L309 L310	0LC1532101A 0LC1532101A	15UH 10% 3216 R/TC FI-C3216-1 15UH 10% 3216 R/TC FI-C3216-1
		L8	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-1
		L9	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-1
	F	ET & TRA	ANSISTOR	
		IC1101	0TF492509AA	SI4925DY TP TEMIC 30V 6.1A S
		IC902	0TF492509AA	SI4925DY TP TEMIC 30V 6.1A S
		Q1000	0TR388109AA	KTC3881 CHIP TP KEC
		Q1101	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q1102	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q212	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q300	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q302	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q303	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q304	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q318	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q701 Q100	0TR387500AA 0TR387500AA	CHIP 2SC3875S(ALY) BK KEC CHIP 2SC3875S(ALY) BK KEC
		Q100	0TR367300AA	CHIP 2SC36735(AET) BK KEC
		Q12	0TR150400BA	CHIP 2SA1504S(ASY) BK KEC
		Q13	0TR150400BA	CHIP 2SA1504S(ASY) BK KEC
		Q14	0TR150400BA	CHIP 2SA1504S(ASY) BK KEC
		Q15	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q16	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q17	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q210	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q211	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q213	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q301 Q305	0TR387500AA 0TR150400BA	CHIP 2SC3875S(ALY) BK KEC
		Q305 Q306	0TR150400BA	CHIP 2SA1504S(ASY) BK KEC CHIP 2SA1504S(ASY) BK KEC
		Q308	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q310	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q313	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q315	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q316	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q317	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q500	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
		Q901	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC
	R	ESISTOR	Rs	
		R10	0RH3301D622	3.3K 1/10W 5 D.R/TP
		R1001	0RH0562D622	56 1/10W 5 D.R/TP
		R1003	0RH8200D622	820 1/10W 5 D.R/TP
		R1004	0RH3000D622	300 1/10W 5 D.R/TP
		R1005	0RH0682D622	68 1/10W 5 D.R/TP
		R1010	0RH7501D622	7.5K 1/10W 5 D.R/TP
		R1012	0RH7502D622	75K 1/10W 5 D.R/TP
		R1014	0RH1000D622	100 1/10W 5 D.R/TP
		R104	0RH1000D622	100 1/10W 5 D.R/TP
		R106	0RH1500D622	150 1/10W 5 D.R/TP

				DATE: 2004. 8. 31.
*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		R107	0RH1503D622	150K 1/10W 5 D.R/TP 3.3K 1/10W 5 D.R/TP
		R11 R1100	0RH3301D622 0RH1000D622	100 1/10W 5 D.R/TP
		R1101	0RH1000D622	100 1/10W 5 D.R/TP
		R1102	0RH1000D622	100 1/10W 5 D.R/TP
		R1106	0RH1202D622	12K 1/10W 5 D.R/TP
		R1107	0RH1502D622	15K 1/10W 5 D.R/TP
		R1108	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
		R1109	0RJ1001D677 0RJ0000D677	1K OHM 1/10 W 5% 1608 R/TP
		R1110 R1112	0RH0000D677	0 OHM 1/10 W 5% 1608 R/TP 0 OHM 1 / 10 W 2012 5.00% D
		R118	0RH1000D622	100 1/10W 5 D.R/TP
		R126	0RH1502D622	15K 1/10W 5 D.R/TP
		R132	0RH1003D622	100K 1/10W 5 D.R/TP
		R133	0RH1003D622	100K 1/10W 5 D.R/TP
		R134	0RH1003D622	100K 1/10W 5 D.R/TP
		R135	0RH1003D622	100K 1/10W 5 D.R/TP
		R140	0RH0392D622	39 1/10W 5 D.R/TP
		R141 R142	0RH0392D622 0RH0392D622	39 1/10W 5 D.R/TP 39 1/10W 5 D.R/TP
		R142	0RH0392D622	39 1/10W 5 D.R/TP 39 1/10W 5 D.R/TP
		R144	0RH0392D622	39 1/10W 5 D.R/TP
		R145	0RH0392D622	39 1/10W 5 D.R/TP
		R146	0RH0392D622	39 1/10W 5 D.R/TP
		R147	0RH0392D622	39 1/10W 5 D.R/TP
		R154	0RH0822D622	82 1/10W 5 D.R/TP
		R156	0RH0822D622 0RH0822D622	82 1/10W 5 D.R/TP 82 1/10W 5 D.R/TP
		R158 R162	0RH2701D622	2.7K 1/10W 5 D.R/TP
		R201	0RH4703D622	470K 1/10W 5 D.R/TP
		R202	0RH7501D622	7.5K 1/10W 5 D.R/TP
		R203	0RH7501D622	7.5K 1/10W 5 D.R/TP
		R204	0RH4703D622	470K 1/10W 5 D.R/TP
		R223	0RH2702D622	27K 1/10W 5 D.R/TP
		R232	0RH1000D622 0RH1000D622	100 1/10W 5 D.R/TP 100 1/10W 5 D.R/TP
		R233 R24	0RH1000D622	100 1/10W 5 D.R/TP 100 1/10W 5 D.R/TP
		R25	0RH1000D622	100 1/10W 5 D.R/TP
		R266	0RH4701D622	4.7K 1/10W 5 D.R/TP
		R267	0RH4702D622	47K 1/10W 5 D.R/TP
		R268	0RH4701D622	4.7K 1/10W 5 D.R/TP
		R312	0RH4700D622	470 1/10W 5 D.R/TP
		R313	0RH1500D622	150 1/10W 5 D.R/TP
		R314 R315	0RH4700D622 0RH1500D622	470 1/10W 5 D.R/TP 150 1/10W 5 D.R/TP
		R322	0RH1500D622	150 1/10W 5 D.R/TP 150 1/10W 5 D.R/TP
		R394	0RH6800D622	680 OHM 1 / 10 W 5% D R/TP
		R395	0RH6800D622	680 OHM 1 / 10 W 5% D R/TP
		R44	0RH1000D622	100 1/10W 5 D.R/TP
		R45	0RH1000D622	100 1/10W 5 D.R/TP
		R502	0RH3301D622	3.3K 1/10W 5 D.R/TP
		R520 R527	0RH1800D622 0RH4701D622	180 1/10W 5 D.R/TP 4.7K 1/10W 5 D.R/TP
		R607	0RH1000D622	100 1/10W 5 D.R/TP
		R610	0RH2701D622	2.7K 1/10W 5 D.R/TP
		R703	0RH4701D622	4.7K 1/10W 5 D.R/TP
		R705	0RH4701D622	4.7K 1/10W 5 D.R/TP
		R712	0RH0752D622	75 1/10W 5 D.R/TP
		R713	0RH0752D622	75 1/10W 5 D.R/TP
		R715 R716	0RH1202D622 0RH0752D622	12K 1/10W 5 D.R/TP 75 1/10W 5 D.R/TP
		R716	0RH0752D622 0RH1502D622	15K 1/10W 5 D.R/TP
		11113	011110020022	TOIX 1/10W O D.IV/IF

*0	* ^ 1	1.00 NO	DARTNO	DATE: 2004. 8. 31.
*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		R725	0RH1000D622	100 1/10W 5 D.R/TP
		R729	0RH1000D622	100 1/10W 5 D.R/TP
		R730	0RH1000D622	100 1/10W 5 D.R/TP
		R737	0RH4701D622	4.7K 1/10W 5 D.R/TP
		R738	0RH4701D622	4.7K 1/10W 5 D.R/TP
		R755	0RH0102D622	10 1/10W 5 D.R/TP
		R756	0RH0102D622	10 1/10W 5 D.R/TP
		R802	0RH8200D622	820 1/10W 5 D.R/TP
		R805	0RH0752D622	75 1/10W 5 D.R/TP
		R806	0RH4700D622	470 1/10W 5 D.R/TP
		R809	0RH0102D622	10 1/10W 5 D.R/TP
		R83	0RH1000D622	100 1/10W 5 D.R/TP
		R85 R850	0RH1000D622 0RH4701D622	100 1/10W 5 D.R/TP 4.7K 1/10W 5 D.R/TP
		R851	0RH4701D622 0RH4701D622	4.7K 1/10W 5 D.R/TP 4.7K 1/10W 5 D.R/TP
		R87	0RH4701D622 0RH1000D622	100 1/10W 5 D.R/TP
		R89	0RH1000D622	100 1/10W 5 D.R/TP
		R930	0RH3301D622	3.3K 1/10W 5 D.R/TP
		R931	0RH3301D622	3.3K 1/10W 5 D.R/TP
		R941	0RH1000D622	100 1/10W 5 D.R/TP
		R960	0RH1000D622	100 1/10W 5 D.R/TP
		R969	0RH1202D622	12K 1/10W 5 D.R/TP
		R971	0RH1502D622	15K 1/10W 5 D.R/TP
		R977	0RH4701D622	4.7K 1/10W 5 D.R/TP
		R979	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		RA600	0RRZVTA001A	MNR-14-E0A-J-101 R OHM 100 O
		RA601	0RRZVTA001A	MNR-14-E0A-J-101 R OHM 100 O
		RA602	0RRZVTA001A	MNR-14-E0A-J-101 R OHM 100 O
		RA603	0RRZVTA001A 0RRZVTA001A	MNR-14-E0A-J-101 R OHM 100 O MNR-14-E0A-J-101 R OHM 100 O
		RA604 RA605	0RRZVTA001A	MNR-14-E0A-J-101 R OHM 100 O
		L303	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		R1002	0RH1501D622	1.5K OHM 1 / 10 W 2012 5.00%
		R1011	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		R1013	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		R1015	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		R1026	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		R1105	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
		R1108	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
		R128	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
		R129	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
		R1290	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		R1301	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
		R1304 R1350	0RH1002D622 0RH0000D622	10K OHM 1 / 10 W 2012 5.00% D 0 OHM 1 / 10 W 2012 5.00% D
		R1350	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D 0 OHM 1 / 10 W 2012 5.00% D
		R226	0RH1000D622	10K OHM 1 / 10 W 2012 5.00% D
		R227	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
		R229	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
		R230	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
		R264	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
		R265	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
		R271	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		R273	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		R300	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
		R301	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
		R302	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
		R304	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
		R305	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
		R306	0RH1002D622 0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D 10K OHM 1 / 10 W 2012 5.00% D
		R307 R308	0RH1002D622 0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D 10K OHM 1 / 10 W 2012 5.00% D
		17000	0111110020022	1013 OF HVI 1 / 10 VV 2012 3.00% D

			DATE: 2004. 8. 31.
*S *AL L	.OC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
	3300	0PH1002De22	10K OHM 1 / 10 W 2012 5 00% D
	R309 R338	0RH1002D622 0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D 10K OHM 1 / 10 W 2012 5.00% D
	R339	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
	R342	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
	R343	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
	R348	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
F	R349	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
F	R352	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
F	R353	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
	R354	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
	R355	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
	R363	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
	R367	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D 1K OHM 1 / 10 W 2012 5.00% D
	R373 R377	0RH1001D622 0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
1 1 -	R379	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
	R381	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
	R383	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
	R46	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
F	R5006	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
F	R5008	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
F	R5014	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
	R505	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
	R506	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
	R516	0RH0222D622	22 OHM 1 / 10 W 2012 5.00% D
	R517 R519	0RH0222D622 0RH0222D622	22 OHM 1 / 10 W 2012 5.00% D 22 OHM 1 / 10 W 2012 5.00% D
	R530	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
	R532	0RH0222D622	22 OHM 1 / 10 W 2012 5.00% D
F	R700	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
F	R726	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
F	R732	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
F	R752	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
	R753	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
	R760	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
1 1 -	R761	0RH0000D622 0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D 0 OHM 1 / 10 W 2012 5.00% D
	R803 R854	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
	R963	0RH1002D622	10K OHM 1 / 10 W 2012 5.00% D
	R964	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
F	R978	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
F	R980	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
F	R999	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
	_1003	0RJ2200D677	220 OHM 1/10 W 5% 1608 R/TP
	R100	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
	R101	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
	R102 R1027	0RJ1000D677 0RJ1202D677	100 OHM 1/10 W 5% 1608 R/TP 12K OHM 1/10 W 5% 1608 R/TP
	R1027	0RJ1202D677 0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
	R105	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
	R108	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
	R109	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
F	R110	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
I I	R1109	0RJ1001D677	1K OHM 1/10 W 5% 1608 R/TP
	R111	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
	R112	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
1 1	R113	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
	R114	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
	R115 R116	0RJ1000D677 0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP 100 OHM 1/10 W 5% 1608 R/TP
	R117	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
	R120	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
1 1			


				DATE: 2004. 8. 31.
*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		R121	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R122	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R123	0RJ2202D677	22K OHM 1/10 W 5% 1608 R/TP
		R124	0RJ1500D677	150 OHM 1/10 W 5% 1608 R/TP
		R125	0RJ4701D677	4.7K OHM 1/10 W 5% 1608 R/TP
		R127	0RJ3301D677	3.3K OHM 1/10 W 5% 1608 R/TP
		R130	0RJ5601D477	5.6K OHM 1/10 W 1% 1608 R/TP
		R1300	0RJ6801D477	6.8K OHM 1/10 W 1% 1608 R/TP
		R1302	0RJ2202D477	22K OHM 1/10 W 1% 1608 R/TP
		R1303	0RJ6801D477	6.8K OHM 1/10 W 1% 1608 R/TP
		R1305	0RJ2202D477	22K OHM 1/10 W 1% 1608 R/TP
		R131	0RJ5601D477	5.6K OHM 1/10 W 1% 1608 R/TP 82K OHM 1/10 W 5% 1608 R/TP
		R136 R137	0RJ8202D677 0RJ8202D677	82K OHM 1/10 W 5% 1608 R/TP
		R138	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R139	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R15	0RJ4700D677	470 OHM 1/10 W 5% 1608 R/TP
		R152	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R153	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R155	0RJ2700D677	270 OHM 1/10 W 5% 1608 R/TP
		R157	0RJ2700D677	270 OHM 1/10 W 5% 1608 R/TP
		R159	0RJ2700D677	270 OHM 1/10 W 5% 1608 R/TP
		R16	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R160	0RJ1500D677	150 OHM 1/10 W 5% 1608 R/TP
		R161	0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R163	0RJ1500D677	150 OHM 1/10 W 5% 1608 R/TP
		R164	0RJ1500D677	150 OHM 1/10 W 5% 1608 R/TP
		R17	0RJ2202D677	22K OHM 1/10 W 5% 1608 R/TP
		R173	0RJ3301D677	3.3K OHM 1/10 W 5% 1608 R/TP
		R175	0RJ3301D677	3.3K OHM 1/10 W 5% 1608 R/TP
		R18	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R206	0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R207	0RJ0752D677	75 OHM 1/10 W 5% 1608 R/TP
		R210	0RJ3902D677	39K OHM 1/10 W 5% 1608 R/TP
		R211	0RJ5102D677	51K OHM 1/10 W 5% 1608 R/TP
		R212	0RJ4703D677 0RJ0752D677	470K OHM 1/10 W 5% 1608 R/TP
		R213	0RJ0752D677 0RJ0752D677	75 OHM 1/10 W 5% 1608 R/TP 75 OHM 1/10 W 5% 1608 R/TP
		R214	0RJ0752D677 0RJ4703D677	470K OHM 1/10 W 5% 1608 R/TP
		R215 R222	0RJ4703D677 0RJ1001D677	1K OHM 1/10 W 5% 1608 R/TP
		R224	0RJ1001D677 0RJ4702D677	47000 OHM 1/10 W 5% 1608 R/TP
		R225	0RJ1001D677	1K OHM 1/10 W 5% 1608 R/TP
		R228	0RJ1001D677	1K OHM 1/10 W 5% 1608 R/TP
		R231	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R234	0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R239	0RJ0752D677	75 OHM 1/10 W 5% 1608 R/TP
		R242	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R243	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R250	0RJ3902D677	39K OHM 1/10 W 5% 1608 R/TP
		R251	0RJ5102D677	51K OHM 1/10 W 5% 1608 R/TP
		R252	0RJ0752D677	75 OHM 1/10 W 5% 1608 R/TP
		R255	0RJ0752D677	75 OHM 1/10 W 5% 1608 R/TP
		R260	0RJ0752D677	75 OHM 1/10 W 5% 1608 R/TP
		R261	0RJ0752D677	75 OHM 1/10 W 5% 1608 R/TP
		R262	0RJ4703D677	470K OHM 1/10 W 5% 1608 R/TP
		R263	0RJ4703D677	470K OHM 1/10 W 5% 1608 R/TP
		R303	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R317	0RJ2700D677	270 OHM 1/10 W 5% 1608 R/TP
		R319	0RJ2700D677	270 OHM 1/10 W 5% 1608 R/TP
		R321	0RJ2700D677	270 OHM 1/10 W 5% 1608 R/TP
		R323	0RJ1500D677	150 OHM 1/10 W 5% 1608 R/TP
		R326	0RJ2001D677	2K OHM 1/10 W 5% 1608 R/TP

				DATE: 2004 9 24
*S	*AL	LOC. NO.	PART NO.	DATE: 2004. 8. 31. DESCRIPTION / SPECIFICATION
	,		. ,	
		R329	0RJ2001D677	2K OHM 1/10 W 5% 1608 R/TP
		R34	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R35	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R356	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R357	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R358	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R359	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R385	0RJ6800D677	680 OHM 1/10 W 5% 1608 R/TP
		R387 R390	0RJ6800D677 0RJ6800D677	680 OHM 1/10 W 5% 1608 R/TP 680 OHM 1/10 W 5% 1608 R/TP
		R392	0RJ6800D677	680 OHM 1/10 W 5% 1608 R/TP
		R393	0RJ6800D677	680 OHM 1/10 W 5% 1608 R/TP
		R444	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R445	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R447	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R448	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R47	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R48	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R50	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R500	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R5002	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R5007	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R5009	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R501	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R5013	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R5015	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R5016 R5017	0RJ0000D677 0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP 0 OHM 1/10 W 5% 1608 R/TP
		R5017	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R5020	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R5020	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R504	0RJ1001D677	1K OHM 1/10 W 5% 1608 R/TP
		R51	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R514	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R515	0RJ4703D677	470K OHM 1/10 W 5% 1608 R/TP
		R518	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R52	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R521	0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R522	0RJ0332D677	33 OHM 1/10 W 5% 1608 R/TP
		R523	0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R524	0RJ0332D677	33 OHM 1/10 W 5% 1608 R/TP
		R525	0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R526	0RJ0332D677	33 OHM 1/10 W 5% 1608 R/TP
		R528	0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R529 R53	0RJ0000D677 0RJ1000D677	0 OHM 1/10 W 5% 1608 R/TP 100 OHM 1/10 W 5% 1608 R/TP
		R533	0RJ1000D677 0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R533	0RJ0222D677 0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R54	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R55	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R56	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R57	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R58	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R59	0RJ1211D477	1.21K OHM 1/10 W 1% 1608 R/TP
		R60	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R600	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R601	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R602	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R603	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R604	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R606	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
	l	R608	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP

*S	*AL	LOC. NO.	DARTNO	DATE: 2004. 8. 31. DESCRIPTION / SPECIFICATION
3	AL	LOC. NO.	PART NO.	DESCRIPTION/SPECIFICATION
		R609	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R62	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R64	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R66	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R68	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R70	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R701	0RJ1001D677	1K OHM 1/10 W 5% 1608 R/TP
		R702 R706	0RJ1001D677 0RJ0000D677	1K OHM 1/10 W 5% 1608 R/TP
		R706	0RJ1000D677	0 OHM 1/10 W 5% 1608 R/TP 100 OHM 1/10 W 5% 1608 R/TP
		R711	0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R717	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R718	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R72	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R720	0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R721	0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R722	0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R727	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R728	0RJ0000D677 0RJ1000D677	0 OHM 1/10 W 5% 1608 R/TP 100 OHM 1/10 W 5% 1608 R/TP
		R73 R731	0RJ1000D677 0RJ4701D677	4.7K OHM 1/10 W 5% 1608 R/TP
		R739	0RJ4701D677 0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R740	0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R751	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R754	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R757	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R758	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R759	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R79	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R800 R801	0RJ0752D677 0RJ0752D677	75 OHM 1/10 W 5% 1608 R/TP 75 OHM 1/10 W 5% 1608 R/TP
		R807	0RJ0102D677	10 OHM 1/10 W 5% 1608 R/TP
		R808	0RJ0102D677	10 OHM 1/10 W 5% 1608 R/TP
		R81	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R852	0RJ4701D677	4.7K OHM 1/10 W 5% 1608 R/TP
		R853	0RJ4701D677	4.7K OHM 1/10 W 5% 1608 R/TP
		R855	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R856	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R86	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R88 R90	0RJ1000D677 0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP 100 OHM 1/10 W 5% 1608 R/TP
		R901	0RJ0472D677	47 OHM 1/10 W 5% 1608 R/TP
		R902	0RJ0472D677	47 OHM 1/10 W 5% 1608 R/TP
		R904	0RJ0472D677	47 OHM 1/10 W 5% 1608 R/TP
		R906	0RJ0472D677	47 OHM 1/10 W 5% 1608 R/TP
		R908	0RJ0822D677	82 OHM 1/10 W 5% 1608 R/TP
		R909	0RJ0822D677	82 OHM 1/10 W 5% 1608 R/TP
		R910	0RJ0822D677	82 OHM 1/10 W 5% 1608 R/TP
		R913 R914	0RJ1000D677 0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP 100 OHM 1/10 W 5% 1608 R/TP
		R914 R915	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R916	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R917	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R918	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R919	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R92	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R920	0RJ4990D477	499 OHM 1/10 W 1% 1608 R/TP
		R921	0RJ4990D477	499 OHM 1/10 W 1% 1608 R/TP
		R923	0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP 22 OHM 1/10 W 5% 1608 R/TP
		R924 R925	0RJ0222D677 0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R926	0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
1	1			

				DATE: 2004. 8. 31.
*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		R927	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R928	0RJ1000D677 0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R929 R93	0RJ1000D677 0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP 100 OHM 1/10 W 5% 1608 R/TP
		R933	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R934	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R935	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R936	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R937	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R938	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R939	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R94	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R940	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R942	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R943	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R944 R945	0RJ1000D677 0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP 100 OHM 1/10 W 5% 1608 R/TP
		R945	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R947	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R948	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R949	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R95	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R950	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R952	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R953	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R96	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R965	0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R966 R967	0RJ0222D677 0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP 22 OHM 1/10 W 5% 1608 R/TP
		R968	0RJ0222D677 0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R970	0RJ1001D677	1K OHM 1/10 W 5% 1608 R/TP
		R972	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R975	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R98	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R99	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
	_	II TED 0	CDVCTAL	
	_ F	ILIEK &	CRYSTAL	
		X11	6202VDT002E	SX-1SMD SUNNY RADIAL 20250000
		X500	6202VDT002J	SX-1 SUNNY 13.500000MHZ +/- 5
		X900	6202VDT002B	SX-1 SUNNY SC14.3MHZ +/- 30 P
		Z1000	6200QL3002F	"X6966M EPCOS ST SIP5K, 6200QL"
		TUED-		
		THERs		
		IC900	6620F00017A	CCSD-32T-SM WOOYOUNG 32P PLCC
		TU1000	6700VS0003D	TAEW-G052P LGIT MULTI VS RCA
	С	ONTROL	BOARD	
		1.1700	01.004.001/44.0	401 ILI IZ 2 2*2 4 TD
		L1700 R1700	0LA0102K119 0RN8200F409	10UH K 2.3*3.4 TP 820 1/6W 1% TA52
		R1700	0RN6200F409	620 1/6W 1% TA52
		R1701	0RN5100F409	510 1/6W 1 TA52
		R1703	0RN4300F409	430 OHM 1/6 W 1.00% TA52
		R1704	0RN3300F409	330 1/6W 1% TA52
		R1705	0RN2700F409	270 1/6W 1% TA52
		R1706	0RN2701F409	2.7K OHM 1/6 W 1.00% TA52
		SW1700	140-313A	TACT 2LEAD 100G(TA) LG C&D NO
		SW1701	140-313A	TACT 2LEAD 100G(TA) LG C&D NO
			140-313A	TACT 2LEAD 100G(TA) LG C&D NO
L		SW1703	140-313A	TACT 2LEAD 100G(TA) LG C&D NO
			_	

				DATE: 2004. 8. 31.
S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		SW1704	140-313A	TACT 2LEAD 100G(TA) LG C&D NO
		SW1705	140-313A	TACT 2LEAD 100G(TA) LG C&D NO
		SW1706	140-313A	TACT 2LEAD 100G(TA) LG C&D NO
	- 10	R BOARD	,	
		C1500	0CN1040K949	0.1M 50V Z F TA52
		L1500	0LA0102K119	10UH K 2.3*3.4 TP
		IR1500	6726TV0001A	TSOP4838SO1 VISHAY 38.0KHZ HO
	L	ED & P/S	W BOARD	
		C1600	0CN1040K949	0.1M 50V Z F TA52
		L1600	0LA0102K119	10UH K 2.3*3.4 TP
		R1600	0RD3301Q609	3.30K 1/4W(3 5% TA52
		R1601	0RD2701Q609	2.70K 1/4W(3 5% TA52
		R1602	0RD2700Q609	270 1/4W(3 5% TA52
		R1603	0RD1001Q609	1K 1/4W(3 5% TA52
		R1604	0RD1001Q609	1K 1/4W(3 5% TA52
			0RD1001Q609	,
		R1605 R1606		1K 1/4W(3 5% TA52
			0RD1500Q609	150 1/4W(3 5% TA52
			140-313A	TACT 2LEAD 100G(TA) LG C&D NO
			0DLBE0128AA	BRIGHT LED ELECTRONICS BL-BUB
		Q1601	0TR319809AA	KTC3198-Y(KTC1815) TP KEC TO9
		Q1602	0TR319809AA	KTC3198-Y(KTC1815) TP KEC TO9
		Q1603	0TR319809AA	KTC3198-Y(KTC1815) TP KEC TO9
	V	IDEO BO	ARD	
	Т		7.1.12	
		C2006	0CN4710K519	470P 50V K B TA52
		C2007	0CH5471K416	470PF 50V 5% NP0 2012 R/TP
		C2007	0CN4710K519	470P 50V K B TA52
		C2008	0CH5471K416	470PF 50V 5% NP0 2012 R/TP
		C2020	0CK105DK94A	"1UF 2012 50V 80%,-20% R/TP F("
		C2021	0CK105DK94A	"1UF 2012 50V 80%,-20% R/TP F("
		R2001	0RD0752Q609	75 1/4W(3 5% TA52
		R2002	0RD0752Q609	75 1/4W(3 5% TA52
		R2003	0RD0752Q609	75 1/4W(3 5% TA52
		R2004	0RD0752Q609	75 1/4W(3 5% TA52
		R2005	0RD0752Q609	75 1/4W(3 5% TA52
		R2005	0RH0752D622	75 1/4W(5 5/6 1A32
			0RD4703Q609	
		R2006		470K 1/4W(3 5% TA52
		R2007	0RD4703Q609	470K 1/4W(3 5% TA52
		R2008	0RH0752D622	75 1/10W 5 D.R/TP
		R2012	0RH0752D622	75 1/10W 5 D.R/TP
		R2014	0RH4703D622	470K 1/10W 5 D.R/TP
		R2017	0RH4703D622	470K 1/10W 5 D.R/TP
		R2018	0RJ1000H680	100 OHM 1/2 W 5% 5025 R/TP
		R2019	0RJ1000H680	100 OHM 1/2 W 5% 5025 R/TP
		R2020	0RJ1000H680	100 OHM 1/2 W 5% 5025 R/TP
		R2021	0RJ1000H680	100 OHM 1/2 W 5% 5025 R/TP
		R2025	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		R2026	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
	1	I		İ

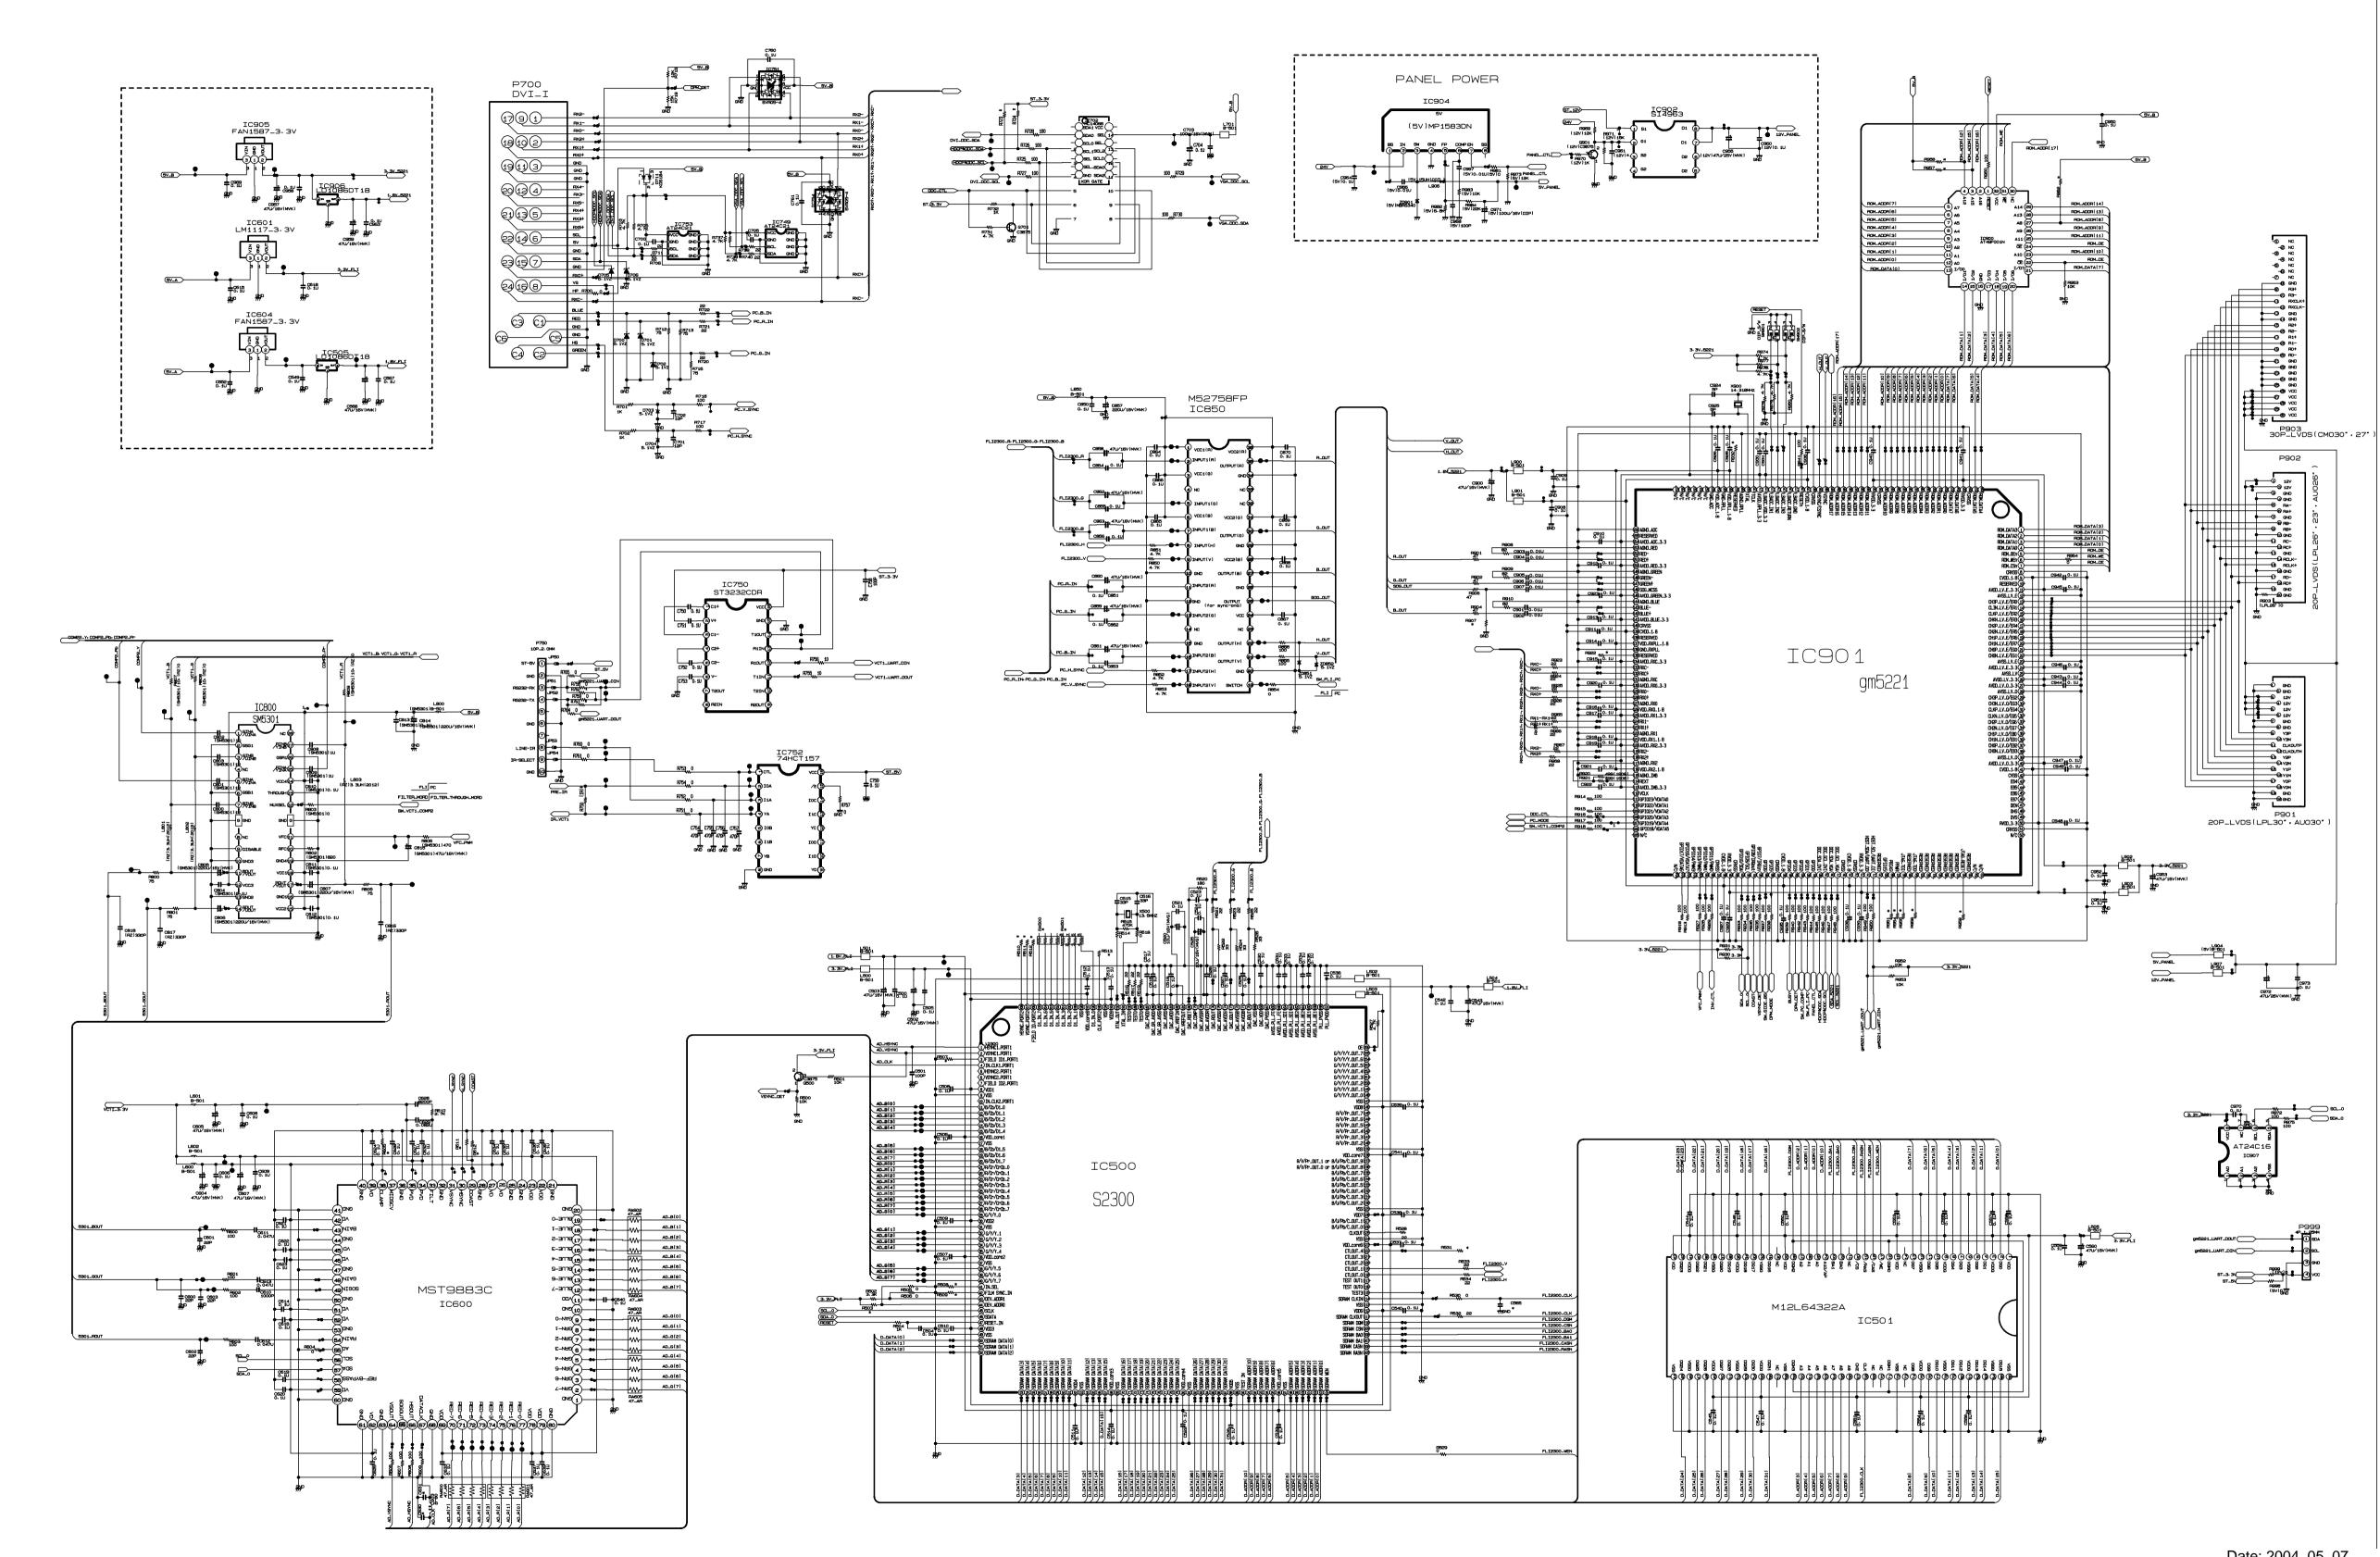



Aug., 2004 P/NO : 3828TSL104Y Printed in Korea